
SMS TEXT MESSAGING AND E-MAIL

Receive and send text messages and e-mails from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit handsfreelink.honda.com to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.


Receiving Messages

Use the selector knob to make and enter selections.

 A notification appears on the display. Select Read to open the message.

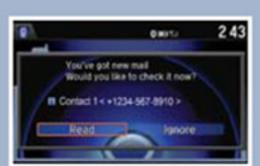


The message is displayed, and the system reads it aloud.

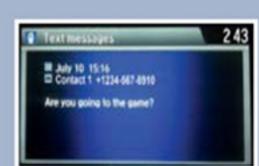


Replying to Messages

Use the selector knob to make and enter selections.


I. With the message open, press MENU to enter the Message menu.

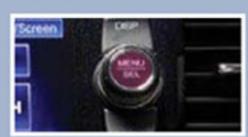


2. **Select** Reply.

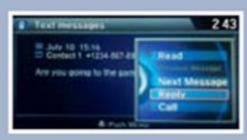

Select one of the six available reply messages.

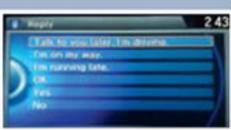

4. **Select** Send to send the message.

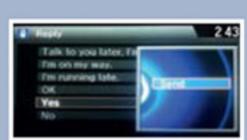


Calling the Sender

Use the selector knob to make and enter selections.

 With the message open, press MENU to enter the Message menu.



Select Call.

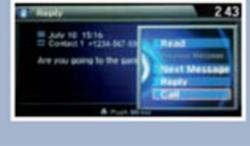

3. HFL begins dialing the number.



Displaying Messages


Use the selector knob to make and enter selections.

I. Press DISP and select Phone.



Select Text/Mail. The 20 most recent messages are displayed.

your desired account in the Phone Settings menu.

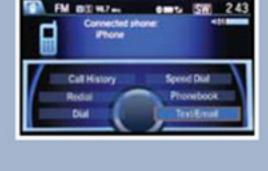

 Select Inbox or the desired folder. Select a message to open it and hear it read aloud.



Note: Notifications and operation for SMS Text and E-Mail are separate. Choose