

INSTRUMENT PANEL INDICATORS












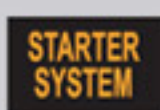

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Automatic transmission shown

Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer





 STARTER SYSTEM	Starter system*	 ABS	ABS (anti-lock brake system)
 +	Charging system		Malfunction lamp (check engine light)
 BRAKE	Low brake fluid		TPMS (tire pressure monitoring system)
 BRAKE SYSTEM	Brake system		VSA [®] (vehicle stability assist)
	Low oil pressure		Smart Entry System*
	SRS (supplemental restraint system)		Automatic light control
	EPS (electric power steering)		

Condition Indicators

Action is needed by driver

 BRAKE	Parking brake on: Release		Seat belt reminder: Fasten seat belt(s)
	Door/Trunk open: Close door(s) / trunk		Low tire pressure: Add air
	Low fuel: Refill		Maintenance Minder™: Make dealer appointment
	Immobilizer (blinks): Use correct key		

On/Off Indicators

 PASSENGER AIRBAG OFF	PASSENGER AIRBAG OFF (next to display screen)		Fog lights on*
 OFF	VSA OFF		Headlights on
 CRUISE CONTROL	CRUISE CONTROL on		Turn signals/hazards on
 CRUISE MAIN	CRUISE MAIN on		High beams on
	ECON Mode on		

*if equipped