

## BLUETOOTH® HANDSFREELINK®

 
Make and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if your phone is Bluetooth-compatible. **To reduce the likelihood of driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### Using HFL

**Pick-Up button:** Answer an incoming call or go to a phone-specific voice portal screen.

**Hang-Up/Back button:** End a call, decline an incoming call, or cancel an operation.

**Talk button:** Make a call using a stored voice tag, phonebook name, or phone number.

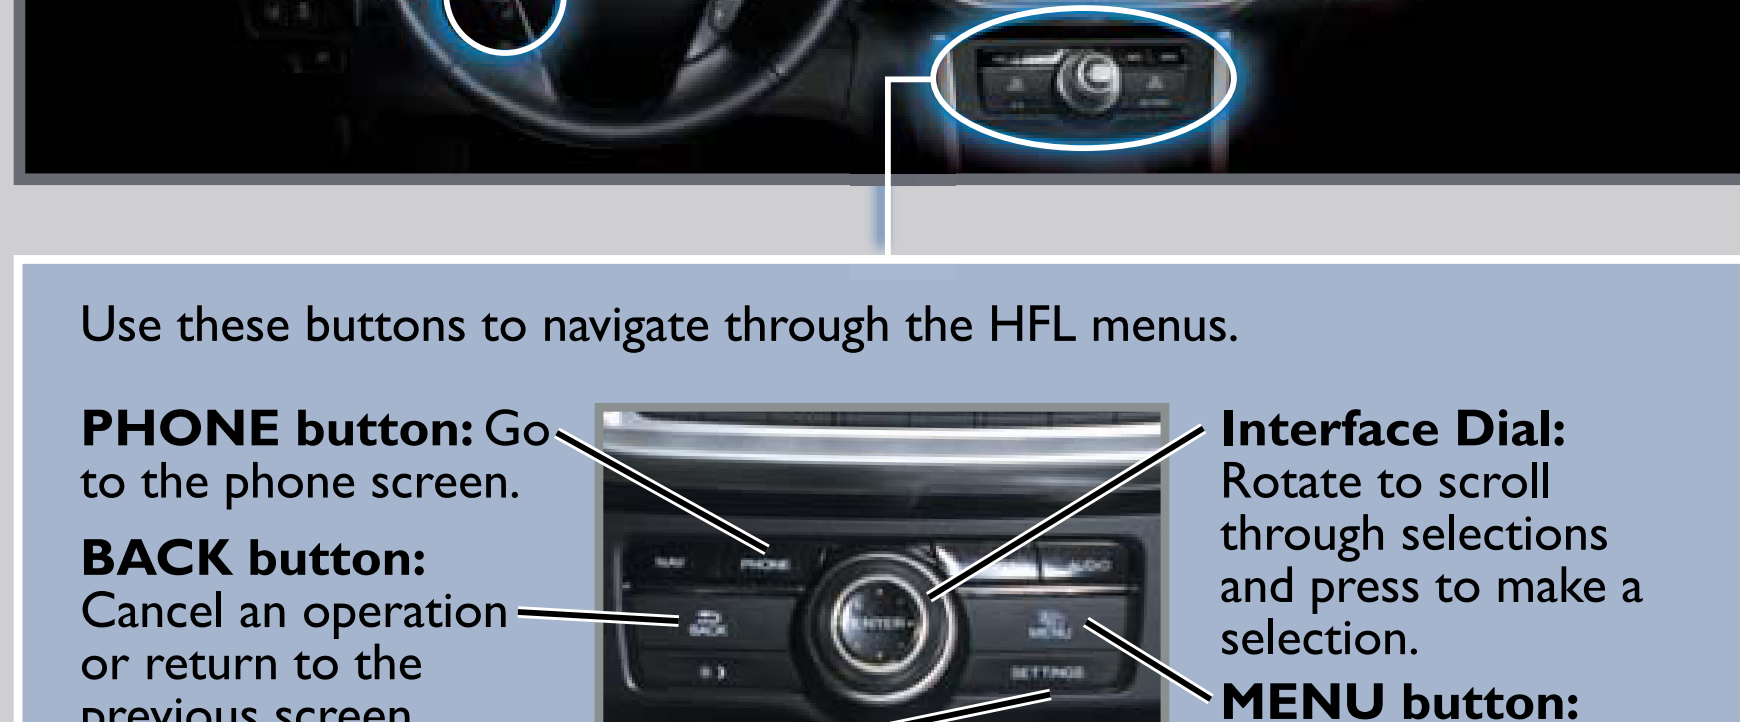


Use these buttons to navigate through the HFL menus.

**PHONE button:** Go to the phone screen.

**BACK button:** Cancel an operation or return to the previous screen.

 **SETTINGS button:** Go to Phone Settings to pair a phone and set up text/mail options.

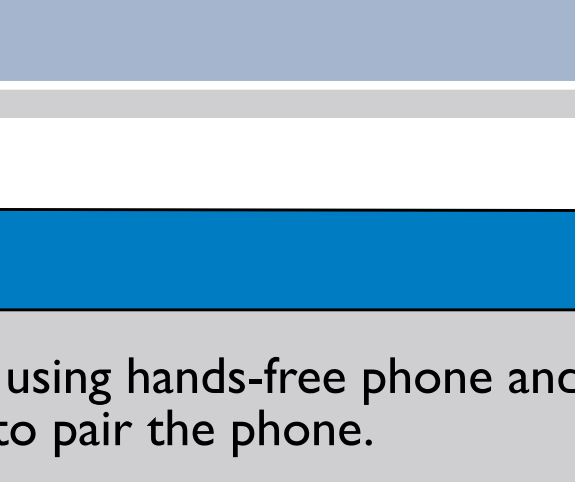

**Interface Dial:** Rotate to scroll through selections and press to make a selection.


**MENU button:** From the Phone screen, access Speed Dial, Redial, Call History, Phonebook, Dial, and Text/Mail options.

### Pairing Your Phone

 
Pair your phone to begin using hands-free phone and related audio functions. The vehicle must be stopped to pair the phone.

Use the interface dial to make and enter selections.

1. Press **SETTINGS**.

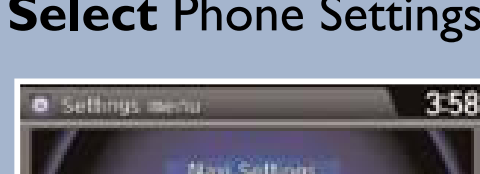

 2. Select **Phone Settings**.

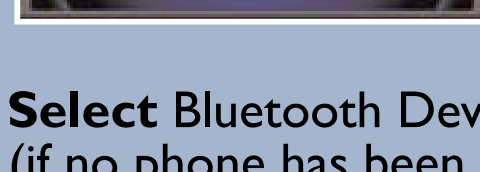


3. Select **Bluetooth Device List** (if no phone has been paired) or **Connect Phone** (if another phone has been paired).




4. Select **Add Bluetooth Device**.



 5. Make sure your phone is in discovery mode.

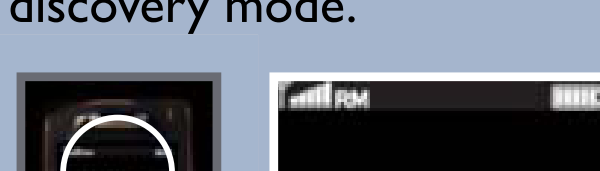


 6. HFL searches for your phone. **Select** your phone when it appears on the list.

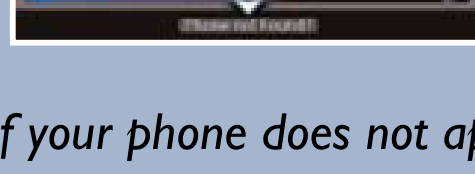


*If your phone does not appear:* **Select** Phone Not Found and **search** for HandsFreeLink from your phone.

 7. HFL gives you a six-digit code. **Compare** it to the code that appears on your phone. If it is the same, **connect** to HFL from your phone.

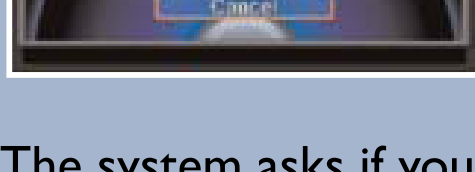

 8. The system asks if you want to enable **Phone Synchronization**. **Select On**.

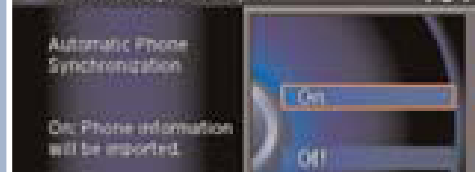

### Dialing a Number

Enter a 10-digit phone number to call.

 
Using the Menu\*

Use the interface dial to make and enter selections.


1. Press **PHONE**.



2. Press **MENU**.

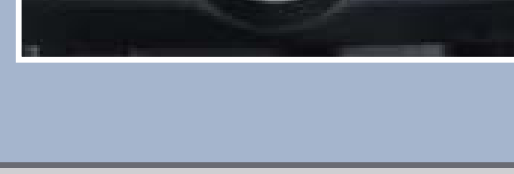

 3. **Select Dial**.

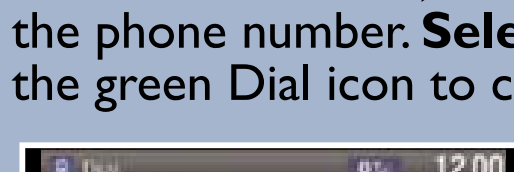

4. From the navigation screen or the touchscreen, **enter** the phone number. **Select** the green Dial icon to call.




\*This feature is inoperable when the vehicle is moving.


### Using Voice Commands

 Press and release the **TALK** button to say a command.

1. Say **"Dial by number."**

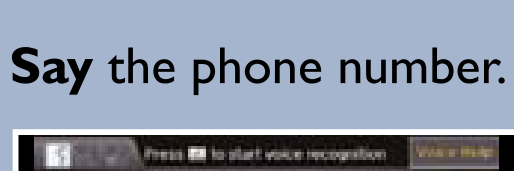

 2. Say the phone number.

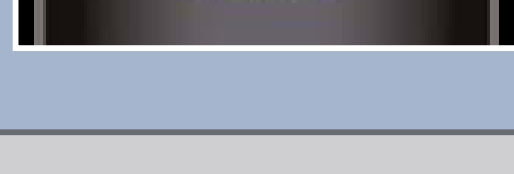

3. Say **"Dial."** The system begins to dial.



### Using Speed Dial

Store 20 speed dial entries for quick calling.

 
Using the Menu

Use the interface dial to make and enter selections.


1. Press **PHONE**.



2. From the Speed Dial tab, **scroll** the list of speed dial entries.

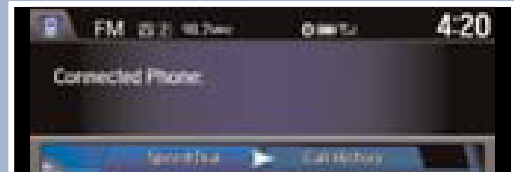

 3. **Select** the entry to call.

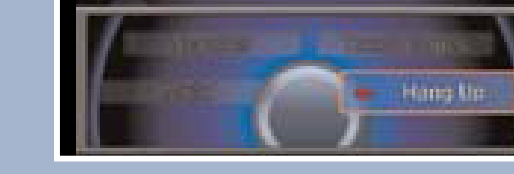


### Using Voice Commands

When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. See your Owner's Manual for more information.

Press and release the **TALK** button to say a command.

 Say **"Call"** and the stored voice tag name. The system begins to dial.

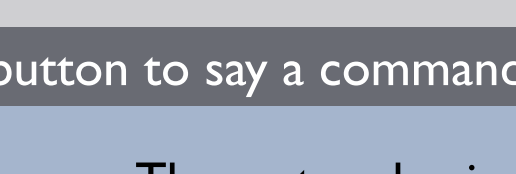

You can also say the name and say of any phone number stored in your phonebook. For example, say **"Call by name"** followed by **"John Smith mobile."**

**Note:** Phone synchronization must be on for the **"Call by name"** feature to work.

### Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the interface dial to make and enter selections.

 
1. Press **PHONE**.




2. Press **MENU**.



3. **Select** Phonebook.

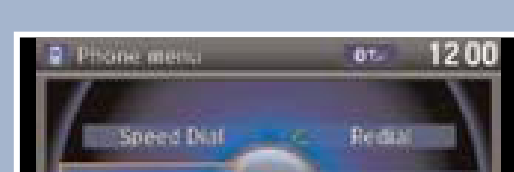

 4. **Scroll** through the list to find the name and number you want to call, and **select** it to call.

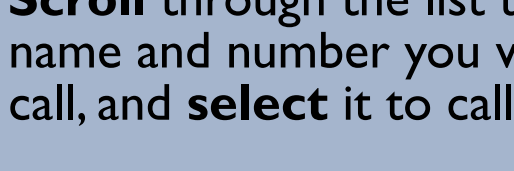


### Receiving a Call


When you receive an incoming call, you hear a notification and see the following pop-up message:



 Press the **Pick-Up** button to accept the call.

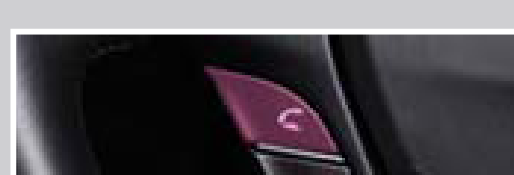

 Press the **Hang-Up** button to end or decline the call.

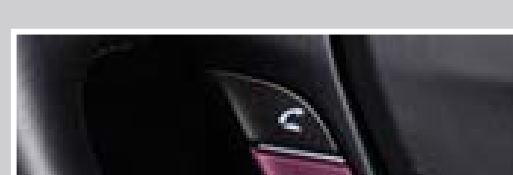

### Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
<b>HFL System (Without Navigation)</b>	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
<b>HFL System (With Navigation)</b>	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted