



SMS TEXT MESSAGING AND E-MAIL

Receive and send text messages and e-mails from your paired and linked phone using *Bluetooth® HandsFreeLink®*. Visit handsfreelink.honda.com to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

Receiving Messages

Use the interface dial to make and enter selections.



1. A notification appears on the display. **Select** Read to open the message.
2. The message is displayed, and the system reads it aloud.

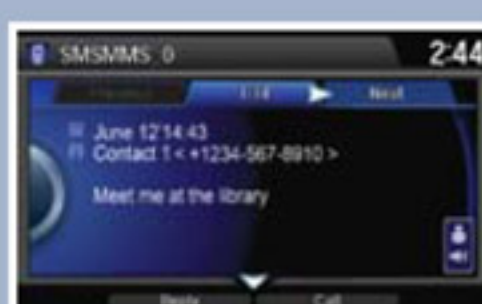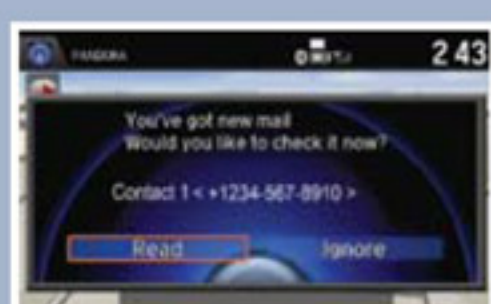


Replying to Messages

Use the interface dial to make and enter selections.

1. With the message open, **move** the interface dial down to select Reply.
3. **Select** Send to send the message.

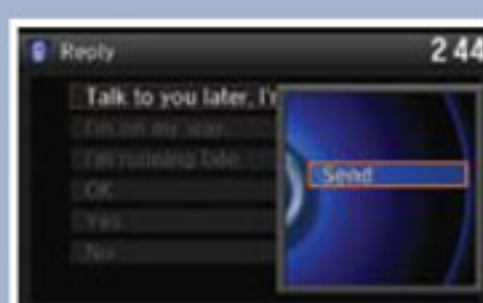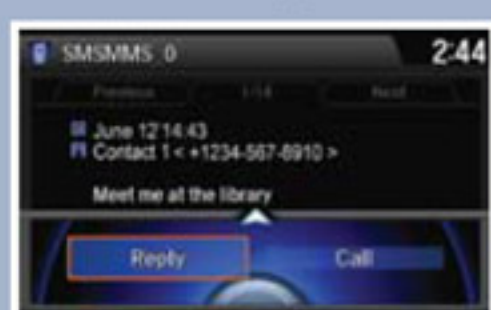



2. **Select** one of the six available reply messages.

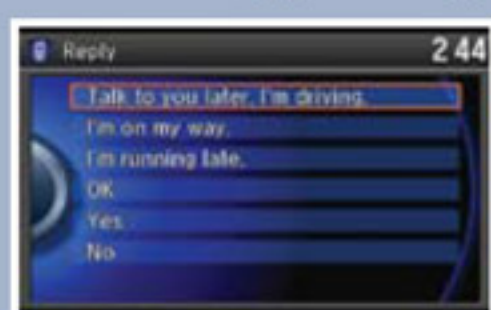

Calling the Sender

Use the interface dial to make and enter selections.




1. With the message open, **move** the interface dial down to select Call.
2. HFL begins dialing the number.

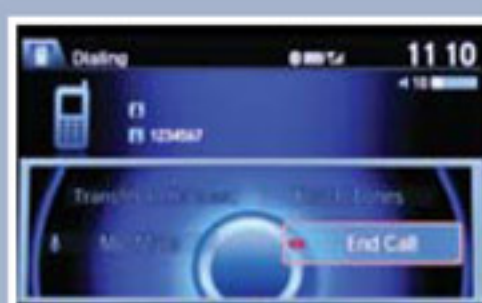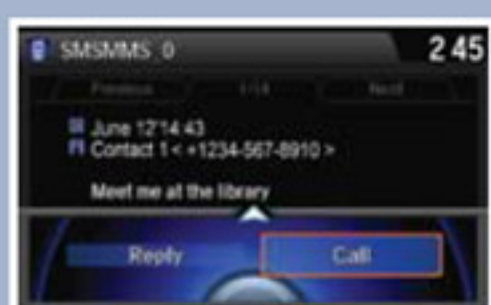

Displaying Messages

Use the interface dial to make and enter selections.

1. **Press** PHONE.
2. **Press** MENU.
3. **Select** Text/Email. The 20 most recent messages are displayed.
4. **Select** Inbox or the desired folder.
5. **Select** a message to open it and hear it read aloud.

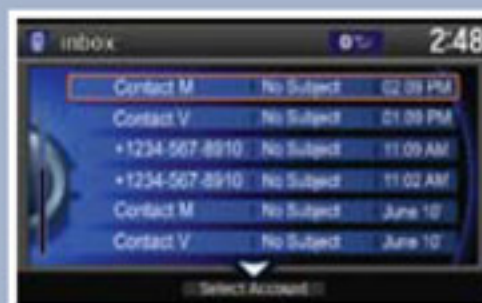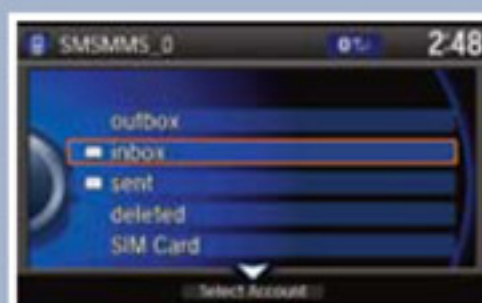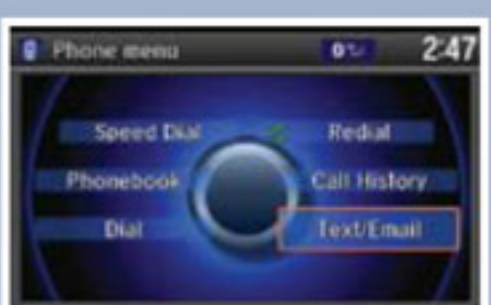

Note: Notifications and operation for SMS Text and E-mail are separate. Choose your desired account in the Phone Settings menu.