

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



EPS (electric power steering)



Low brake fluid, Brake system



Malfunction indicator lamp (check engine light)



Low oil pressure



VSA® (vehicle stability assist)



SRS (supplemental restraint system)



TPMS (tire pressure monitoring system)



Transmission (blinking)



E-DPS* (all-wheel drive)



ABS (anti-lock brake system)



DRL (daytime running lights)

Condition Indicators

Action is needed by driver



Parking brake on:
Release



Seat belt reminder:
Fasten seat belt(s)



Door/Tailgate open:
Close door(s) / tailgate



Low fuel:
Refill



Low tire pressure:
Add air



Maintenance Minder™:
Make service appointment



All-Wheel Drive* (blinks):
Pull over and idle



Immobilizer (blinks):
Use correct key

On/Off Indicators



PASSENGER AIRBAG **OFF**
(next to multi-information display)



1st detent: parking lights **on**
2nd detent: headlights **on**



SIDE AIRBAG **OFF**



Turn signals/hazards **on**



VSA **OFF**



Fog lights* **on**



CRUISE MAIN **on**



High beams **on**



CRUISE CONTROL **on**



ECON Mode **on**

* if equipped