INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see a dealer



Charging system



ABS (anti-lock brake system)



Low brake fluid, Brake system



IMA System



Low oil pressure



Malfunction lamp (check engine light)



SRS (supplemental restraint system)



VSA® (vehicle stability assist)



EPS (electronic power steering)



TPMS (blinks and stays on) (tire pressure monitoring system)



Low engine temperature (stays on)



Transmission (blinks)

Condition Indicators Action is needed by driver



Parking brake on:

Release



Seat belt reminder:

Fasten seat belt(s)



Door/Hatch open:

Close door(s) / hatch



Low fuel: Refill



Low tire pressure on:

Add air



High temperature indicator: Pull over for engine cooling



Message indicator:

See MID



Immobilizer (blinks):
Use other vehicle key

On/Off Indicators



SIDE AIRBAG **OFF**



NORMAL mode on



PASSENGER AIRBAG **OFF** (center audio panel)



ECON mode on



VSA OFF



Plus Sport System on





Fog lights on (if equipped)



Auto Idle Stop on (blinking)



Exterior lights on



CRUISE MAIN on

SPORT mode on



Turn signals/hazards on



CRUISE CONTROL on



High beams on