

 
 
## SMS TEXT MESSAGING (models with navigation)

Receive and send text messages from your paired and linked compatible phone. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

### Receiving Text Messages

Press and release the Talk button before you say a command.


1. A notification appears on the navigation screen when you receive a text message.
2. **Say "Read"** to open the message. The message is displayed, and the system reads it aloud.

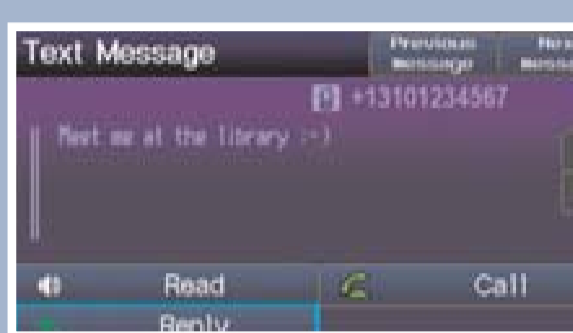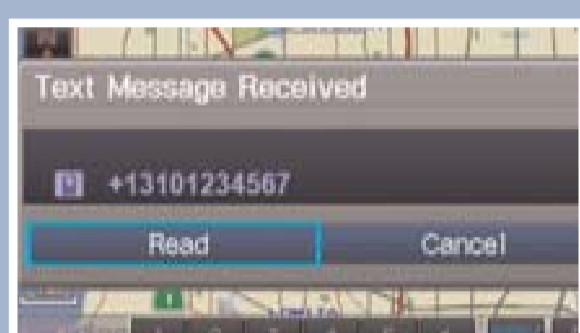



### Displaying Messages

Press and release the Talk button before you say a command.

 1. **Press** the Pick-Up button to go to the Phone screen.
3. **Say** the number next to the message you want. The message is displayed, and the system reads it aloud.

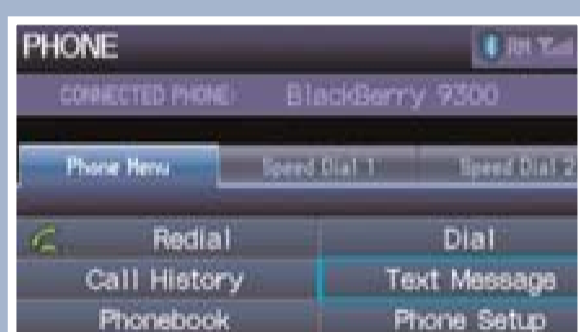

 
 
2. **Say "Text Message."** The 20 most recent text messages from your phone are displayed.

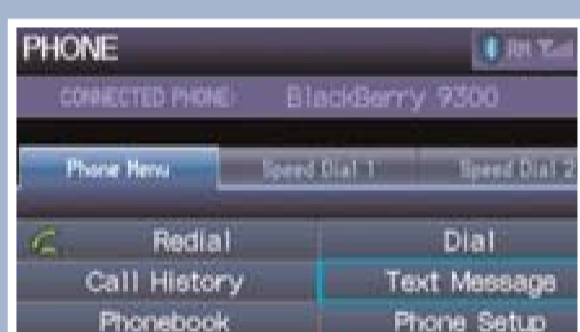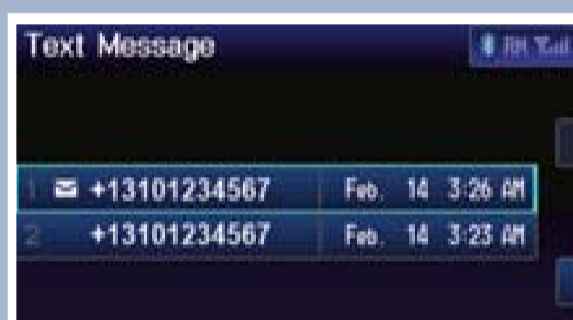

### Replying to Text Messages

Press and release the Talk button before you say a command.

  1. With the message open, **say "Reply."**
2. **Say** the corresponding number of one of the six available reply messages.
3. **Say "Send"** to send the message.
4. A notification appears after the message is sent.

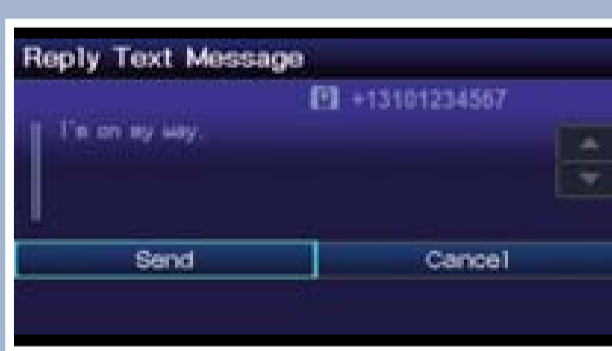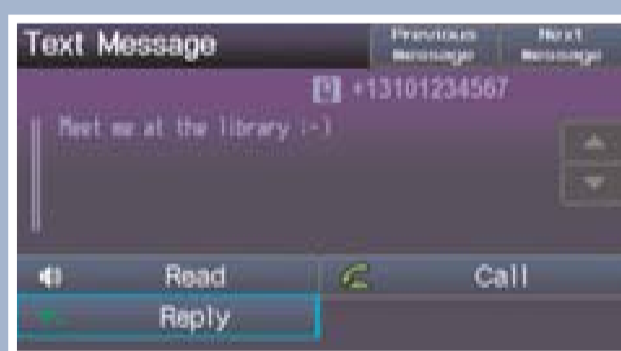

### Calling the Sender

Press and release the Talk button before you say a command.

1. With the message open, **say "Call."**
2. HFL begins dialing the number.

