


TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works

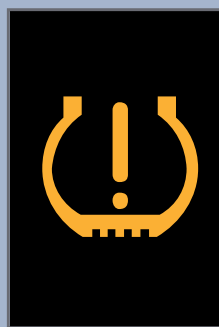

When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on and **CHECK TIRE PRESSURE** appears on the MID.

If there is a problem with the system, **CHECK TPMS SYSTEM** appears on the MID. See a dealer.

What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.



3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

