### BLUETOOTH R HANDSFREELINK R (HFL)

Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

## How to Use HFL

directly to the Phone screen. Hang-Up/Back button: End a call, decline anincoming call, or cancel a selection.

Pick-Up button: Answer an incoming call or go -

Talk button: Make a call using a stored voice tag.





to scroll through cancel an operation or selections and press to return to the previous

make a selection. **PHONE** button: Go directly to the Phone screen.

**Selector knob:** Rotate



screen.

**Back button:** Press to

### can pair your compatible phone only when the vehicle is stopped.

Pairing Your Phone

Use the selector knob to make and enter selections. I. **Press** the Pick-Up button to If your phone does not appear:

Use this pairing method when no phone has ever been paired to the system. You

Yould you like to add new phone new? 2. Make sure your phone is in

go to the Phone screen. A

prompt appears. Select Yes.



the list.

Patrick' e iPhone

3. HFL searches for your phone.

Select it when it appears on



**Select** Phone Not Found, and

your phone. Connect to HFL.

search for HandsFreeLink from





"BlackBerry 9800"

 
has been added.

#### I. **Press** the Pick-Up button to go to the Phone screen.

when you want to pair an additional phone.

Use this pairing method when a phone has already been paired to the system, or

Use the selector knob to make and enter selections.





2. **Select** Phone setup.

No.

4. Select Add a New Phone.



I. **Press** the Pick-Up button

to go to the Phone screen.

Phonebook

Redial

BY...II O

A notification is heard and the following screen appears:

in Call

Select your phone when it appears on the list.

7. HFL searches for your phone.

6. Make sure your phone is in

discovery mode, and select OK.




from your phone. Connect to

HFL.

code. Enter it on your phone when prompted. The phone is now paired.

8. HFL gives you a four-digit

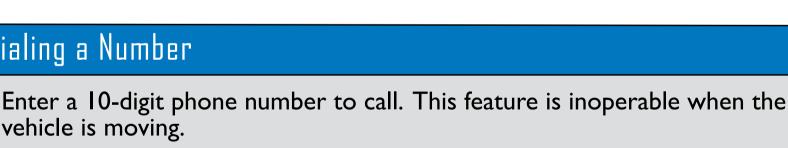

Dial

3. **Enter** the phone number.

Select the green Dial icon or

press the Pick-Up button to call.

12345678 <

4. The call is connected and heard

through the vehicle speakers.

(123)456-7890

Push for Phone Manu

Hang Up \*

O Wintl.

0'04" DY.

Use the selector knob to make and enter selections.


## Phone

 Receiving a Call

2. **Select** Dial.

Dialing a Number

vehicle is moving.



0'04" ₽¥.....



**Restriction Level While Driving** 

# Press the Pick-Up button to Press the Hang-Up button to accept the call.

(123)456-7890

Push for Phone Menu

Hang Up \*

### **Function HFL System (Without Navigation)**

Driver Distraction

Speed dial

Call history

Redial

Call history scroll

Connect to new phone

10-key dial Restricted Phonebook Restricted

Not restricted

Not restricted

Not restricted

Restricted

Voice command only. Limited to three screens

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the

vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted