## AUTO DOOR LOCKS

### Door Locks





Default Lock Setting
The doors are preset to lock when your vehicle reaches about 10 mph.

# Only the driver's door is preset to unlock when you:

- **Shift** into Park (P) for automatic transmission vehicles.
- **Turn** the ignition switch to LOCK (0) for manual transmission vehicles.



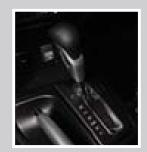

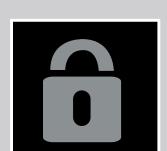



Program how and when the vehicle doors automatically lock and unlock.

### Programming the Auto Door Unlock Setting

**Press** the (+/-) buttons on the steering wheel to scroll through the menu options. **Press** SOURCE to select an option.

I. Press MENU.



2. **Select** Customize Settings.



3. **Select** Door Setup.



4. **Select** Auto Door Unlock.



5. **Select** All Doors with Shift to P.



6. **Press** MENU to exit.



#### Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.



\*IGN OFF for manual transmission vehicles



Auto