

## BLUETOOTH® HANDSFREELINK® (HFL)

Place and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if your phone is compatible.

**To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### How to Use HFL

**Pick-Up button:** Answer an incoming call or go directly to the Phone screen.

**Hang-Up/Back button:** End a call, decline an incoming call, or cancel a selection.

**Talk button:** Make a call using a stored voice tag.



Use these buttons to navigate through the HFL menus.

**Selector knob:** Rotate to scroll through selections and press to make a selection.

**PHONE button:** Go directly to the Phone screen.



 
**Back button:** Press to cancel an operation or return to the previous screen.

### Pairing Your Phone


Use this pairing method when no phone has ever been paired to the system. You can pair your compatible phone only when the vehicle is stopped.

Use the selector knob to make and enter selections.


1. **Press** the Pick-Up button to go to the Phone screen. A prompt appears. **Select** Yes.



 2. Make sure your phone is in discovery mode. **Select** OK.



 3. HFL searches for your phone. **Select** it when it appears on the list.




*If your phone does not appear:*

**Select** Phone Not Found, and **search** for HandsFreeLink from your phone. **Connect** to HFL.



 4. HFL gives you a four-digit code. **Enter** it on your phone when prompted. The phone is now paired.




### Pairing Your Phone (continued)

Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

Use the selector knob to make and enter selections.

 1. **Press** the Pick-Up button to go to the Phone screen.



If a prompt appears asking to connect to a phone, **select** No.

2. **Select** Phone setup.



3. **Select** Connection.



 
4. **Select** Add a New Phone.




5. **Select** an empty location for the phone.



6. Make sure your phone is in discovery mode, and **select** OK.



 7. HFL searches for your phone. **Select** your phone when it appears on the list.



8. HFL gives you a four-digit code. **Enter** it on your phone when prompted. The phone is now paired.



### Dialing a Number

 
Enter a 10-digit phone number to call. This feature is inoperable when the vehicle is moving.

Use the selector knob to make and enter selections.


1. **Press** the Pick-Up button to go to the Phone screen.




2. **Select** Dial.



 3. **Enter** the phone number. **Select** the green Dial icon or **press** the Pick-Up button to call.




 4. The call is connected and heard through the vehicle speakers.




### Receiving a Call

 
A notification is heard and the following screen appears:



 **Press** the Pick-Up button to accept the call.



 **Press** the Hang-Up button to end or decline the call.



### Using the Phonebook

 
When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the selector knob to make and enter selections.


1. **Press** the Pick-Up button to go to the Phone screen.




2. **Select** Phonebook.



 3. **Scroll** through the list to find the name and number you want to call, and **select** it.



 4. The call is connected and heard through the vehicle speakers.



### Using Speed Dial

Store up to 15 numbers for quick calling.

Use the selector knob to make and enter selections.

1. **Press** the Pick-Up button to go to the Phone screen.



 
2. **Select** Speed Dial.



3. **Scroll** through the list to find the entry you want to call, and **select** it using the Pick-Up button.



4. The call is connected and heard through the vehicle speakers.



When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. Press the Talk button and follow the prompts. See your Owner's Manual for more information.

### Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
<b>HFL System (Without Navigation)</b>	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
<b>HFL System (With Navigation)</b>	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted