INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Charging system



ABS (anti-lock brake system)



Low brake fluid, Brake system



EPS (electric power steering)



Low oil pressure



Malfunction indicator lamp (check engine light)



SRS (supplemental restraint system)



VSA® (vehicle stability assist)



Transmission (blinking)



TPMS (blinks and stays on) (tire pressure monitoring system)



Brake system

IMA system



FCW (forward collision warning



system)



LDW (lane departure warning



Low engine temperature

Condition Indicators Action is needed by driver



Parking brake on: **Release**



Seat belt reminder: Fasten seat belt(s)



Door/Trunk open: Close door(s) / trunk



High temperature: **Drive slowly or pull over**



Low fuel: **Refill**



Message indicator: **See i-MID**



Low tire pressure: **Add air**

C====

Immobilizer (blinks):
Use other vehicle key

On/Off Indicators



PASSENGER AIRBAG **OFF** (next to i-MID)



Auto idle stop on



VSA **OFF**



ECON mode on



FCW off



Exterior lights on



CRUISE MAIN on



Turn signals/hazards on



CRUISE CONTROL on



High beams **on**