

ECO ASSIST SYSTEM

Provides various ways to monitor your fuel efficiency and driving style.

Turning the ECON Mode On/Off

1. Press **ECON**.



2. The **ECON** mode indicator comes on.



3. Check the i-MID for the system status.




4. Press **ECON** again to turn the system off.


Note: When turned on, the vehicle's engine performance, transmission, cruise control, and air conditioning system are adjusted to maximize fuel efficiency.

Ambient Meter

Indicates instant fuel efficiency using color-coded bars.

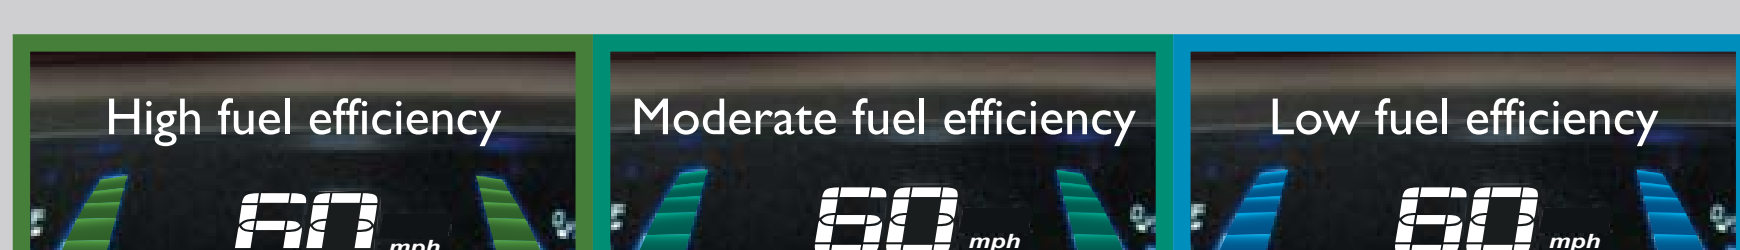

Driver Feedback

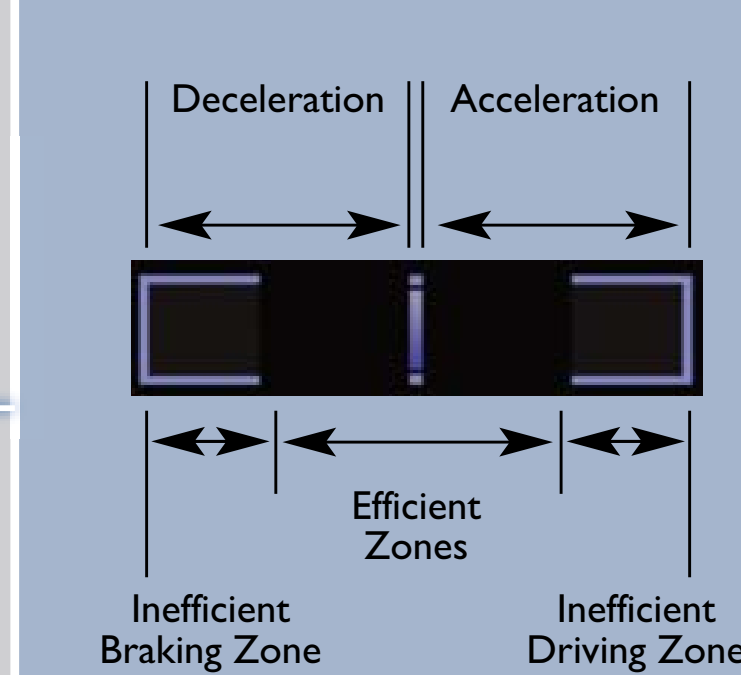

Real-time Fuel Efficiency Coach

Driving Style	Eco Drive Bar (on the i-MID)	Ambient Meter Background Color Changes	Fuel Efficiency
Smooth, steady acceleration high fuel efficiency			High Low
Smooth, steady deceleration high fuel efficiency			
Moderate acceleration			
Moderate deceleration			
Rapid acceleration low fuel efficiency			
Rapid deceleration low fuel efficiency			

Goals:

- Keep the Eco Drive bar near the center.
- Keep the Ambient Meter at **GREEN**.
- Develop a driving style that maximizes fuel efficiency.

ECO Assist Scoring

Monitors the fuel efficiency of your driving style in real time and converts results into leaves, which are displayed in a series of five "plant" icons on the i-MID.


Once you start your vehicle, make sure the i-MID shows the Ecological Drive Display to view your Eco Assist score in real time.



As you drive, you earn leaves if you drive in a fuel-efficient manner, or lose them if you drive inefficiently.




When you turn the ignition off, your drive cycle and lifetime score are displayed on the i-MID.

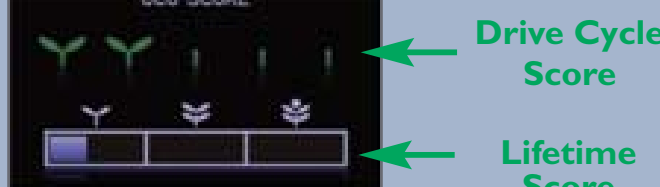

Eco Score

Each time you reach a new stage, a Stage Up Recognition icon briefly appears on the i-MID. When you reach the highest ranking, a Trophy icon briefly appears.

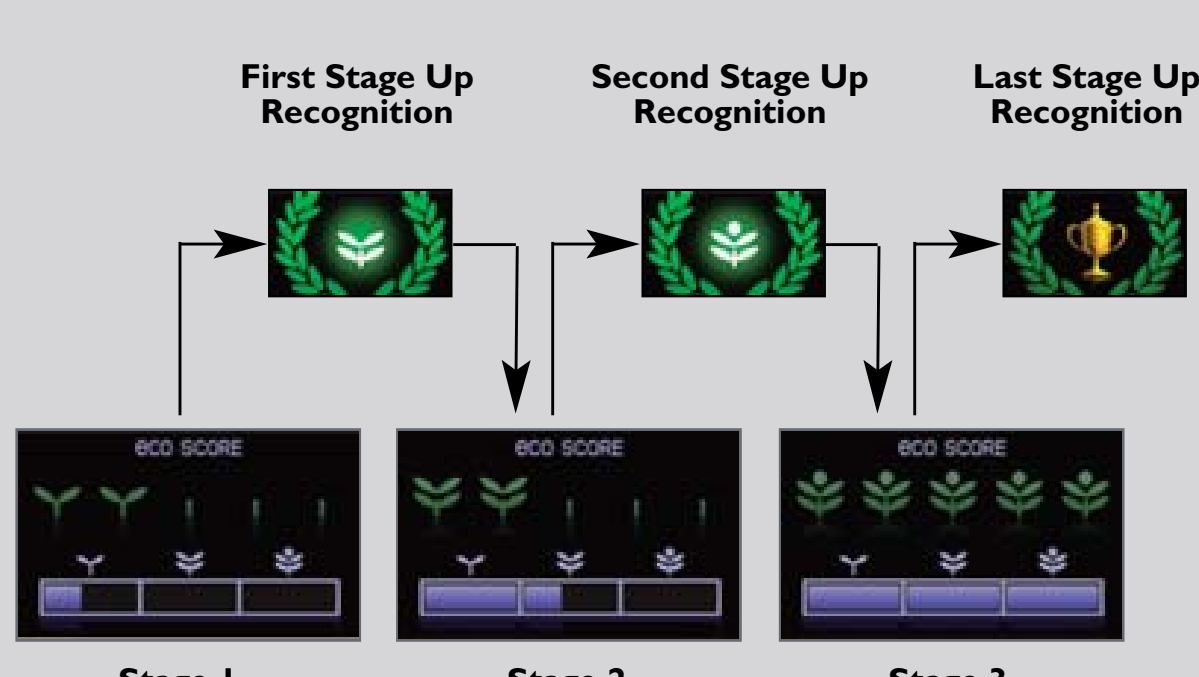

Auto Idle Stop


Shuts the engine off at a stop in order to maximize fuel efficiency. Idle stop occurrence and duration vary depending on certain conditions, such as climate control operation, IMA battery level, and outside temperature. See your Owner's Manual for more information.

How It Works


DECELERATE



STOP

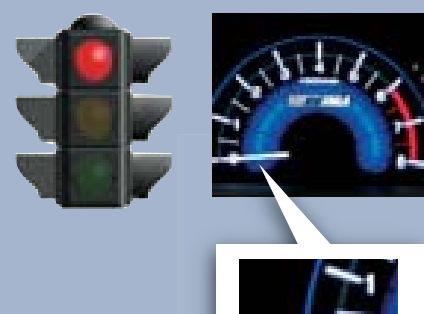

RESTART

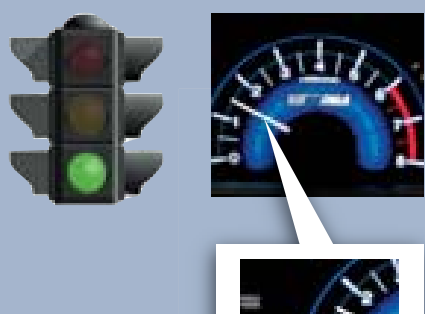

While driving, the engine is on.

At a stop with the brake pedal pressed, the engine turns off.

When you take your foot off the brake pedal, the engine turns back on.

Note: Auto Idle Stop only functions if you come to a stop with the shift lever in the D or N position.

Power Flow Monitor

Shows the status of the Integrated Motor Assist (IMA) system.



Battery level

IMA motor is in operation

Engine is in operation