AUTO DOOR LOCKS

Door Locks



Default Lock Setting The doors are preset to lock when your vehicle reaches about 10 mph.





Default Unlack Setting Only the driver's door is preset to unlock when you:

- **Shift** into Park (P) for automatic transmission vehicles.
- **Turn** the ignition switch to LOCK (0) for manual transmission vehicles.





Program how and when the vehicle doors automatically lock and unlock.

Programming the Auto Door Unlock Setting

Press the (+/-) buttons on the steering wheel to scroll through the menu options. **Press** SOURCE to select an option. See **page 8–9** for more information on the i-MID and its controls.

I. Press MENU.



2. **Select** Customize Settings.



3. **Select** Door Setup.



4. **Select** Auto Door Unlock.



5. **Select** All Doors with Shift to P.




6. **Press** MENU to exit.



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.

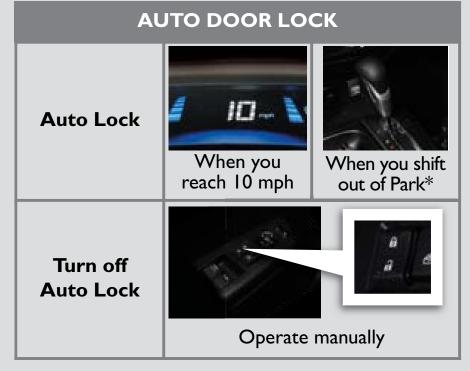



Operate manually

*IGN OFF for manual transmission vehicles