

 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner’s Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



ABS (anti-lock brake system)



Low brake fluid, Brake system



EPS (electric power steering)



Low oil pressure



Malfunction indicator lamp (check engine light)



SRS (supplemental restraint system)



VSA® (vehicle stability assist)



Transmission (blinking) (automatic transmission)



TPMS (blinks and stays on) (tire pressure monitoring system)



Low temperature

Condition Indicators


Action is needed by driver



Parking brake on: **Release**



Seat belt reminder: **Fasten seat belt(s)**

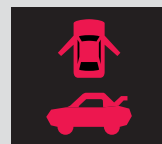

Door/Trunk open: **Close door(s) / trunk**



High temperature: **Drive slowly or pull over**



 
Low fuel: **Refill**



Message indicator: **See i-MID**



Low tire pressure: **Add air**



Immobilizer (blinks): **Use other vehicle key**

On/Off Indicators



 
PASSENGER AIRBAG **OFF** (next to i-MID)



Exterior lights **on**



VSA **OFF**




Turn signals/hazards **on**



CRUISE MAIN **on**



 Fog lights* **on**



CRUISE CONTROL **on**



High beams **on**



ECON* **on**

* if equipped