INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

Accessing the Information Display



When you start the engine, the information display shows your last active selection from the previous drive cycle.

TRIP

Outside Temp, Trip meter A



To toggle between the different displays, **press and release** the select/reset knob repeatedly.

Outside Temp, Trip meter A

Information Displays

