

 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

 
 
If an indicator remains on, there may be a problem; see your dealer

	Charging system		ABS (anti-lock brake system)
	Low brake fluid, Brake system		DRL (daytime running lights)
	Low oil pressure		Malfunction indicator lamp (check engine light)
	SRS (supplemental restraint system)		TPMS (tire pressure monitoring system)
	EPS* (electric power steering)		VSA® (vehicle stability assist)
	FCW* (forward collision warning system)		Smart Entry System*
	LDW* (lane departure warning system)		Starter system

 
 
 
Condition Indicators

Action is needed by driver

	Parking brake on: Release		Low fuel: Refill
---	-------------------------------------	---	----------------------------

	Door/Tailgate open: Close door(s) / tailgate		Low tire pressure: Add air
	Seat belt reminder: Fasten seat belt(s)		Maintenance Minder™: Make dealer appointment
	Immobilizer (blinks): Use other vehicle key		LDW* (blinks): Stay in your lane
	FCW* (blinks): Brake		

On/Off Indicators

	PASSENGER AIRBAG OFF (in center panel)		Fog lights on
	SIDE AIRBAG OFF		Exterior lights on
	VSA OFF		Turn signals/hazards on
	CRUISE MAIN on		Fuel economy on*
	CRUISE CONTROL on		High beams on

* if equipped