
## TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

## How It Works



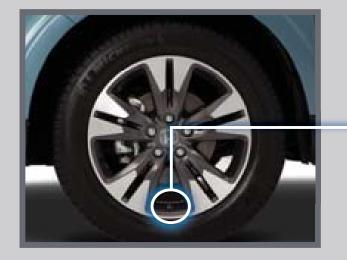

Each tire valve stem contains a TPMS sensor.






When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



If the TPMS indicator appears, there may be a problem with the system. See your dealer.

## What to Do

- I. Visually inspect the tires for damage.
- 2. Use a tire air pressure gauge to

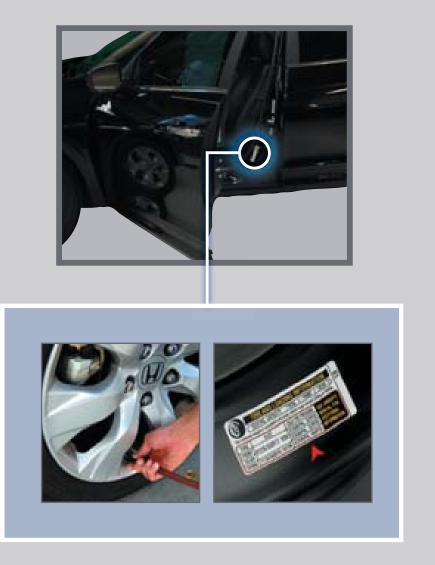

check which tire(s) have low pressure.



**3. Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.