


INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the upper center screen.

Changing the Display




Press the Display button to change the main displays.

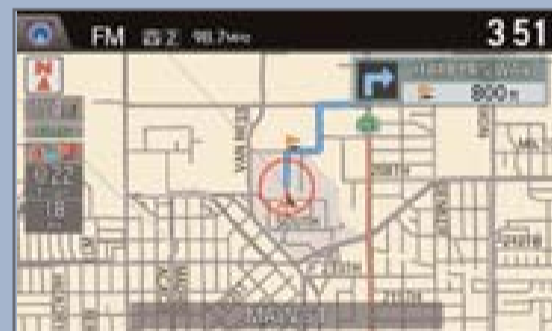

Display Options

Audio

Shows current audio information.

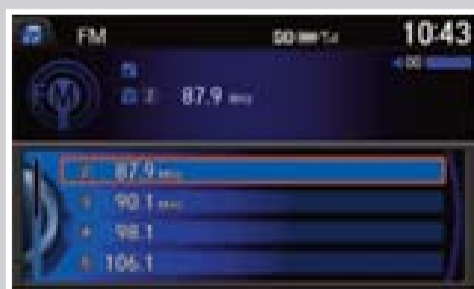


Phone

Shows phone screen.



Navigation

Shows map or navigation information.

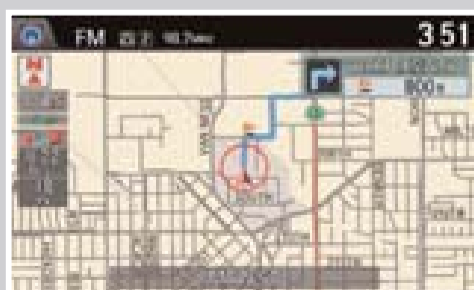

Info

Shows information screen and options.

