

## FUEL FILL DOOR



Easy-to-use locking fuel door keeps your fuel cap secure.

### Opening the Fuel Fill Door

When you **unlock** the driver's door, the fuel door unlocks.



To open, **push and release** the fuel door in the area shown until it pops open.

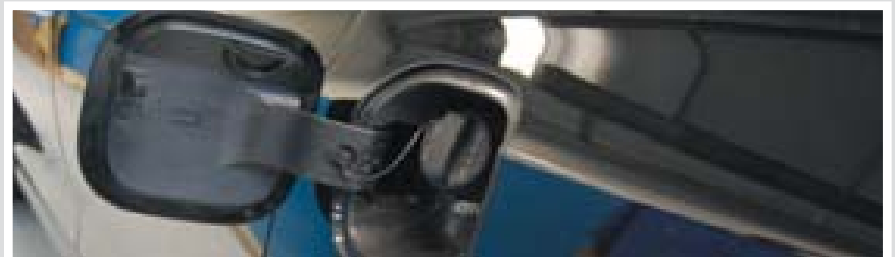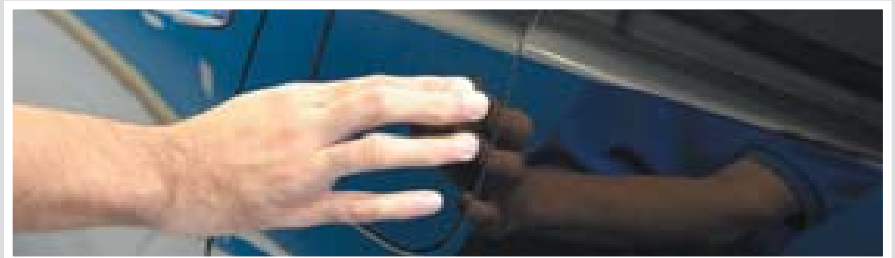

### Closing the Fuel Fill Door

**Push** the fuel door until it is flush with the body.



When you **lock** the driver's door, the fuel door locks.

**Note:** If you lock the doors while the fuel door is open, you must unlock the doors to close the fuel door.

