


INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

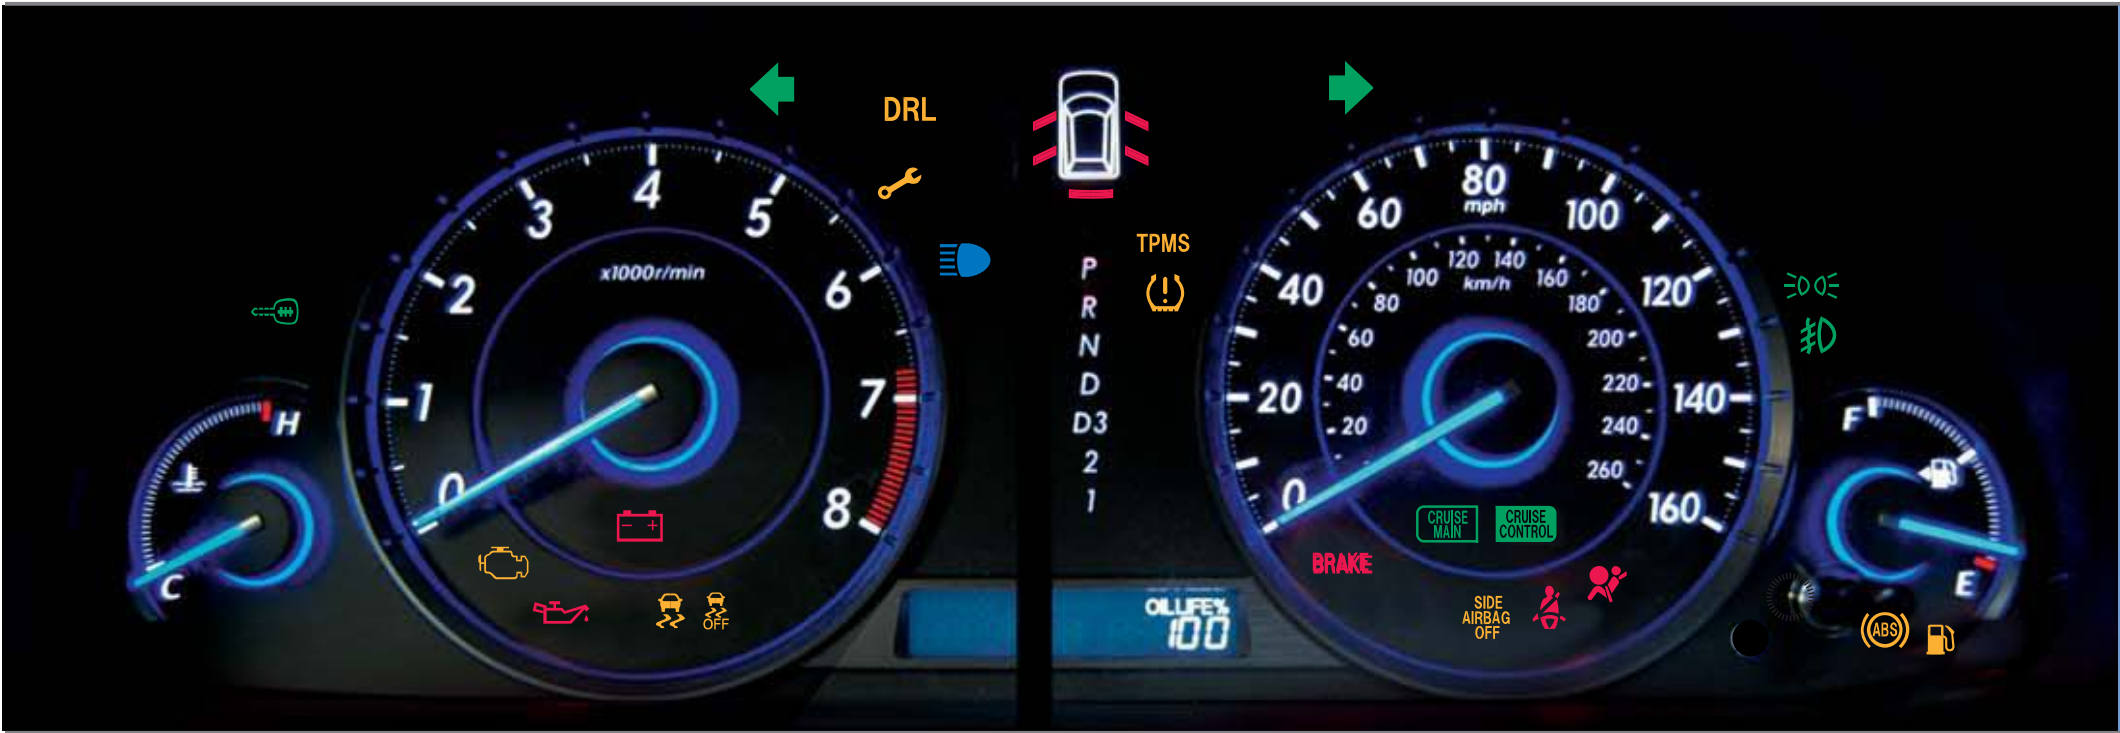

Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



ABS (anti-lock brake system)



 
Low brake fluid, Brake system



DRL (daytime running lights)



Low oil pressure



Malfunction indicator lamp (check engine light)



SRS (supplemental restraint system)



TPMS (tire pressure monitoring system)



VSA[®] (vehicle stability assist)

Condition Indicators

Action is needed by driver



Parking brake on:
Release



Low fuel:
Refill



Door/Tailgate open:
Close door(s) / tailgate



 
Low tire pressure:
Add air



Seat belt reminder:
Fasten seat belt(s)



Maintenance Minder[™]:
Make dealer appointment



Immobilizer (blinks):
Use other vehicle key

On/Off Indicators



PASSENGER AIRBAG **OFF**
(in center panel)



Fog lights **on**



 
SIDE AIRBAG **OFF**



Exterior lights **on**



VSA **OFF**



Turn signals/hazards **on**



CRUISE MAIN **on**



High beams **on**



CRUISE CONTROL **on**