

 








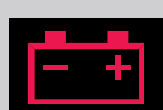

 
## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



### Malfunction Indicators



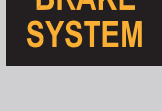

If an indicator remains on, there may be a problem; see a dealer.

 Charging system	 ABS (anti-lock brake system)
 Low brake fluid, Brake system	 IMA system
 Low oil pressure	 Malfunction indicator lamp (check engine light)
 SRS (supplemental restraint system)	 VSA® (vehicle stability assist)
 EPS (electronic power steering)	 TPMS (blinks and stays on) (tire pressure monitoring system)
 Low temperature	 Brake system




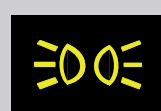

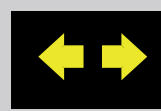




### Condition Indicators

Action is needed by driver.

 Parking brake on: <b>Release</b>	 Seat belt reminder: <b>Fasten seat belt(s)</b>
 Door/Hatch open: <b>Close door(s) / hatch</b>	 Low fuel: <b>Refill</b>

 Low tire pressure on: <b>Add air</b>	 High temperature indicator: <b>Pull over and cool down engine</b>
 Message indicator: <b>See MID</b>	 Immobilizer (blinks): <b>Use correct key</b>

### On/Off Indicators

 SIDE AIRBAG <b>OFF</b>	 ECON mode <b>on</b>
 PASSENGER AIRBAG <b>OFF</b> (center audio panel)	 Exterior lights <b>on</b>
 VSA <b>OFF</b>	 Turn signals/hazards <b>on</b>
 Auto Idle Stop <b>on</b> (blinking)	 High beams <b>on</b>
 CRUISE MAIN <b>on</b>	
 CRUISE CONTROL <b>on</b>	

\* if equipped