

BLUETOOTH® HANDSFREELINK® (HFL) (if equipped)

Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

How to Use HFL

HFL Talk button: Give HFL commands or answer incoming calls.

HFL Back button: End a call, go back to the previous command, or cancel an operation.



Pairing Your Phone

 
Press and release the HFL Talk button before you say a command.

1. **Enable** discovery mode on your compatible phone.


2. If no phone has been paired before, the system gives you instructions.

If you are pairing an additional phone, **say** "Phone setup," then **say** "Pair."


3. HFL gives you a four-digit code that also appears on the MID.

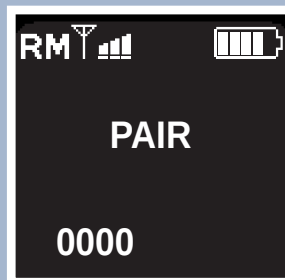

 4. **Search** for HandsFreeLink from your phone, and **enter** the code when prompted. **Connect** to HFL.

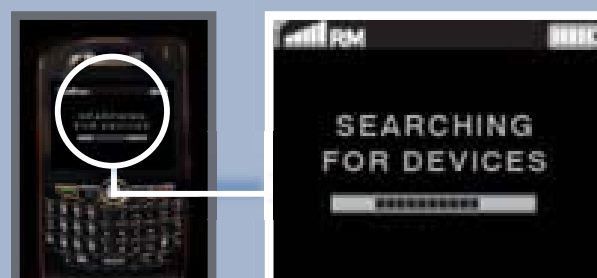

 
5. HFL asks you to name the phone. For example, **say** "Mary's phone." The phone is now added.

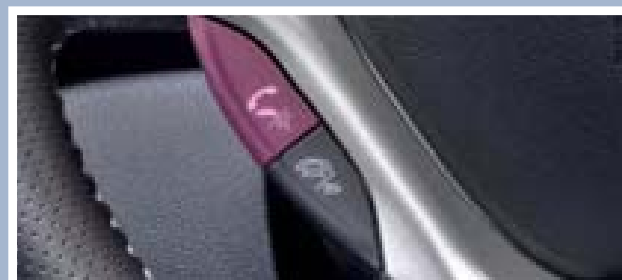


Making a Call

Press and release the HFL Talk button before you say a command.

 1. **Say** "Call" or "Dial" and the phone number.

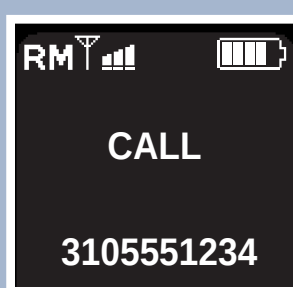

 2. **Say** "Call" or "Dial" to continue.

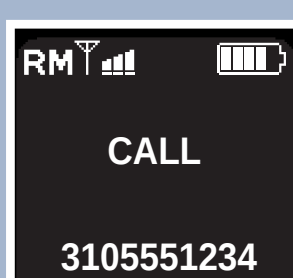

3. The call is connected and heard through the vehicle's speakers.

 


Receiving a Call

A notification is heard and the following appears on the MID:



Press the HFL Talk button to accept the call.

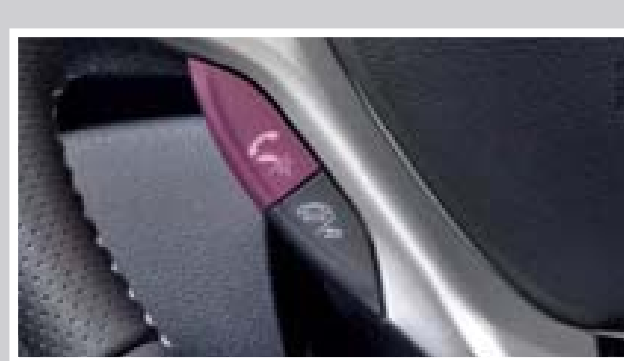

Press the HFL Back button to end or decline the call.

 


HFL Phonebook


Store up to 50 names and their phone numbers, which can be used as speed dials.

Press and release the HFL Talk button before you say a command.


1. **Say** "Phonebook."

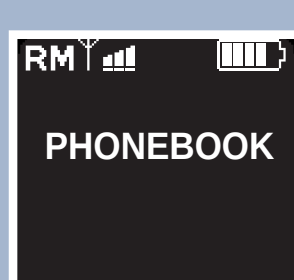

 
3. **Say** the name of the contact, and then the phone number.

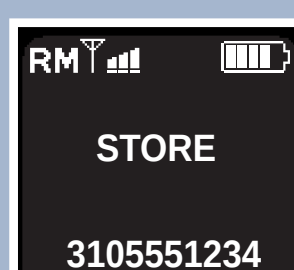

 2. **Say** "Store."

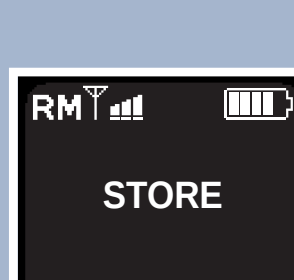

 4. To call a contact once an entry is stored, **say** "Call Mike."

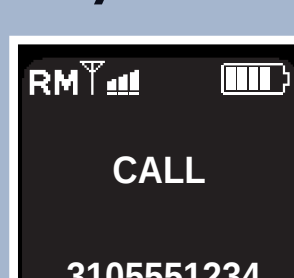

Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
HFL System (Without Navigation)	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted