INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see a dealer.



Charging system



Low brake fluid, Brake system



Low oil pressure



IMA system



Malfunction indicator lamp (check engine light)

ABS (anti-lock brake system)



VSA[®] (vehicle stability assist)



TPMS (blinks and stays on) (tire pressure monitoring system)



SRS (supplemental restraint system)




EPS (electronic power steering)



Low temperature



Brake system

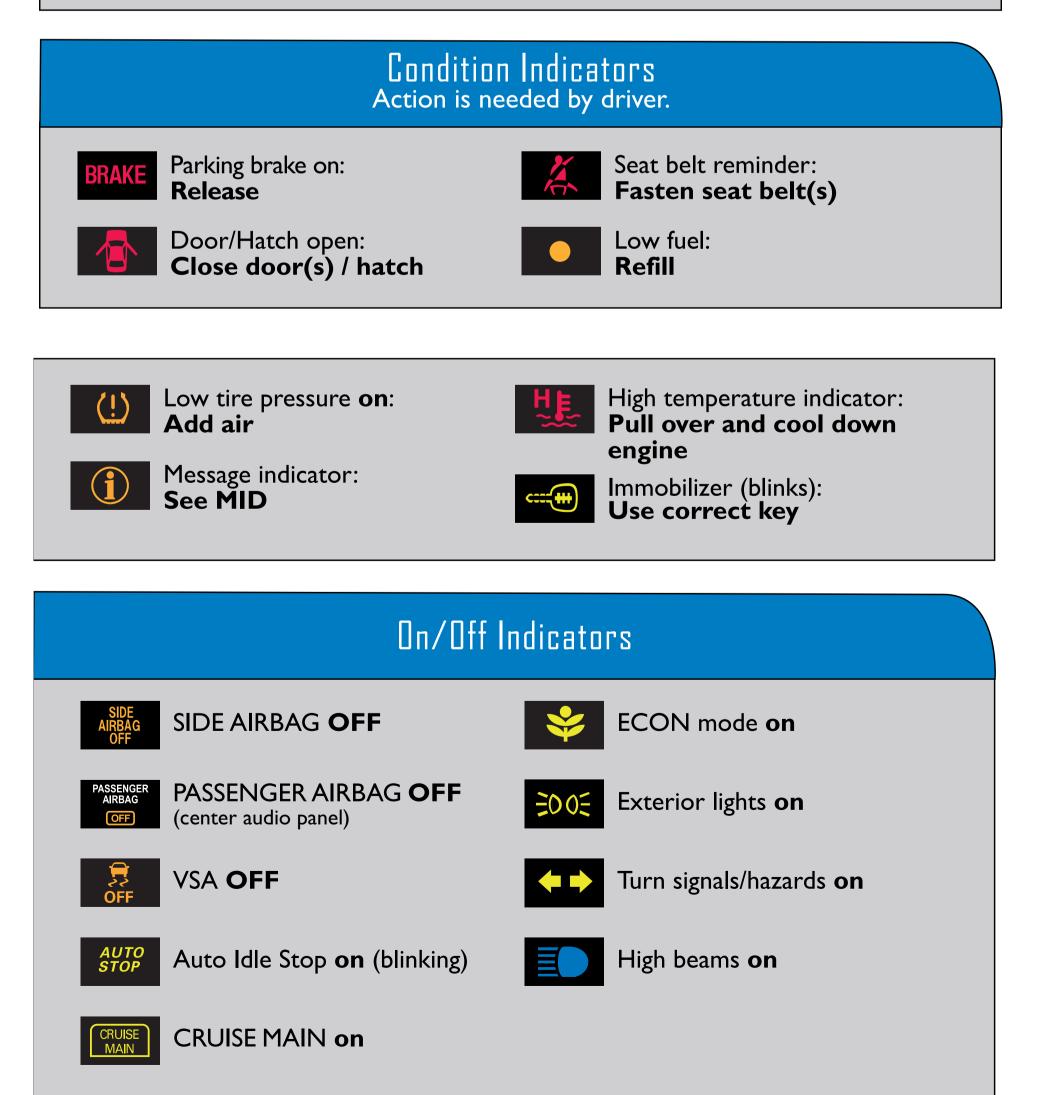



CRUISE CONTROL on