













INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

 Charging system	 DRL (daytime running lights)
 Low brake fluid, brake system	 ABS (anti-lock brake system)
 Low oil pressure	 Malfunction lamp (check engine light)
 SRS (supplemental restraint system)	 VSA [®] (vehicle stability assist)
 Power tailgate	 TPMS (tire pressure monitoring system)
 Power sliding door	 Starter system

Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Seat belt reminder: Fasten seat belt(s)
 Door/Tailgate open: Close door(s)/tailgate	 Low fuel: Refill


 Maintenance Minder™:
Make dealer appointment

 Immobilizer (blinks):
Use correct key

 Low tire pressure:
Add air

On/Off Indicators

 PASSENGER AIRBAG **OFF**
(located on center panel)

 Fuel economy **on**

 SIDE AIRBAG **OFF**

 Headlights **on**

 VSA **OFF**

 Turn signals/hazards **on**

 CRUISE MAIN **on**

 High beams **on**

 CRUISE CONTROL **on**