

 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner’s Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

	Charging system		DRL (daytime running lights)
	Low brake fluid, brake system		ABS (anti-lock brake system)
	Low oil pressure		Malfunction lamp (check engine light)
	SRS (supplemental restraint system)		VSA [®] (vehicle stability assist)
	Power tailgate*		TPMS (tire pressure monitoring system)
	Power sliding door*		Starter system

Condition Indicators

Action is needed by driver

	Parking brake on: Release		Seat belt reminder: Fasten seat belt(s)
	Door/Tailgate open: Close door(s)/tailgate		Low fuel: Refill

	Maintenance Minder™: Make dealer appointment		Immobilizer (blinks): Use correct key
	Low tire pressure: Add air		

On/Off Indicators

	PASSENGER AIRBAG OFF (located on center panel)		Fuel economy on
	SIDE AIRBAG OFF		Headlights on
	VSA OFF		Turn signals/hazards on
	CRUISE MAIN on		High beams on
	CRUISE CONTROL on		

*if equipped