INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Charging system



ABS (anti-lock brake system)



Low brake fluid, Brake system



VTM-4 (4WD only)



Low oil pressure



Malfunction lamp (check engine light)



SRS (supplemental restraint system)



VSA® (vehicle stability assist)



DRL (daytime running lights)



TPMS (tire pressure monitoring system)



Power tailgate

Condition Indicators Action is needed by driver



Parking brake on: Release



Low fuel: Refill



Door/Tailgate open: Close door(s) / tailgate



Low tire pressure: Add air



Seat belt reminder: Fasten seat belt(s)



Maintenance Minder:

Make dealer appointment



Starter system: Hold ignition switch in START (III) for up to 15 seconds



Immobilizer (blinks): Use correct key



A/T temperature (4WD only): Pull over and let engine idle

On/Off Indicators



PASSENGER AIRBAG OFF (located on center panel)



Fog lights on



SIDE AIRBAG **OFF**



Headlights on



VSA OFF



Turn signals/hazards on





High beams on



CRUISE MAIN on



CRUISE CONTROL on



Fuel economy on