# AUTO DOOR LOCKS


Program how and when the vehicle doors and the tailgate automatically lock and unlock.

## Default Lock/Unlock Setting

#### **Default Lock Setting**

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.



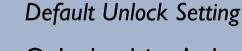

Only the driver's door is preset to unlock when you shift into Park (P).






### Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See Auto Door Locking/Unlocking in your Owner's Manual for instructions on programming these settings.

**AUTO DOOR LOCK** 

**AUTO DOOR UNLOCK** 

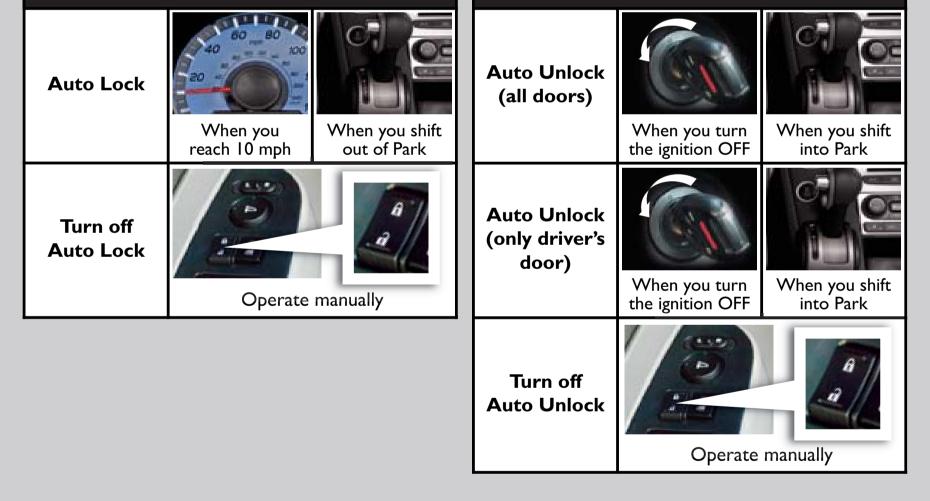

### Programming the Auto Door Unlock Setting

**Press** either Info  $(\blacktriangle/\nabla)$  button on the steering wheel to toggle to the "Keyless" Memory Settings" display on the MID, then **press** SEL/RESET to enter the menu.

I. Select CHANGE SETTING.



4. Select SHIFT TO P.




2. Select DOOR/WINDOW SETUP.



5. Select ALL DOORS.

AUTO DOOR UNLOCK
DR VER DOOR
ALL DOORS
EXIT

3. **Select** AUTO DOOR UNLOCK.

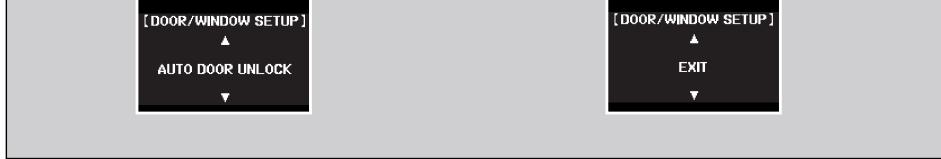

6. Select EXIT to save the setting and exit the menu.

[DOOR/WINDOW SETUP] ▲	
EXIT	