

 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner’s Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



Low brake fluid



Low oil pressure



SRS (supplemental restraint system)



 
DRL (daytime running lights)



ABS (anti-lock brake system)



VTM-4
(variable torque management 4WD)



Malfunction lamp (check engine light)



VSA® (vehicle stability assist)



TPMS*
(tire pressure monitoring system)

**models without navigation only*

Condition Indicators

Action is needed by driver



Parking brake on:
Release



Door/Tailgate open:
Close door(s)/tailgate



In-Bed Trunk open:
Close trunk



Seat belt reminder:
Fasten seat belt(s)



Back window open:
Close back window



Low fuel:
Refill



Low tire pressure:
Add air



VTM-4 (blinks):
Pull over and let engine idle



 
Message indicator*:
Press Info button



Maintenance Minder:
Make dealer appointment



A/T Temperature:
Pull over and let engine idle




Immobilizer (blinks):
Use correct key

**models with navigation only*

On/Off Indicators



 PASSENGER AIRBAG **OFF**
(located on center panel)



SIDE AIRBAG **OFF**



VSA **OFF**



 
CRUISE MAIN **on**




CRUISE CONTROL **on**



Bed lights **on**



Headlights **on**

 

Turn signals/hazards **on**



High beams **on**