BLUETOOTH R HANDSFREELINK (HFL)

Make and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone. To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

Using HFL



incoming call or go to a phonespecific voice portal screen. Hang-Up/Back button: End a

Pick-Up button: Answer an






call, decline an incoming call, or cancel an operation. Talk button: Make a call using a -



stored voice tag, phonebook name, or phone number.



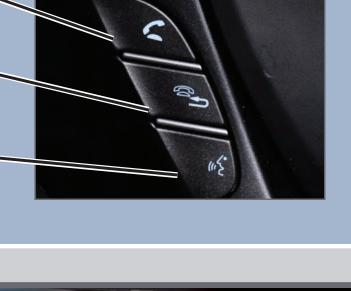



BACK button:

Cancel an operation or return to the

to the phone screen.

previous screen.

SETTINGS button:-Go to Phone Settings to pair a phone and

set up text/e-mail options.

related audio functions.



selection. **MENU** button:

Rotate to scroll

through selections

and press to make a

From the Phone screen, access Speed Dial, Redial, Call History, Phonebook, Dial, and Text/E-Mail options.

Info Settings

Audio Settings

Use the interface dial to make and enter selections.

list.

your phone.

Pairing Your Phone

I. Press SETTINGS. Settings menu 2. Select Phone Settings.

Pair your phone when the vehicle is stopped to begin using hands-free phone and

System Settings phone has been paired) or Connect Phone (if pairing an additional phone).

4. Select Add Bluetooth Device. 5. Make sure your phone is in discovery

mode and select OK.

6. HFL searches for your phone. Select your phone when it appears on the

3. Select Bluetooth Device List (if no

for HandsFreeLink from your phone. 7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from

Select Phone Not Found and search


If your phone does not appear:

Phone Synchronization. Select On to automatically import contacts and call history.

8. The system asks if you want to enable



Vehicle Settings

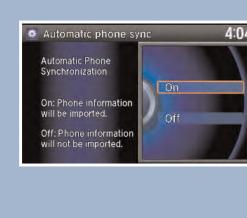

You can also select the icons

Incoming Call

on the touchscreen.

 \otimes

answer the call.

Press the Pick-

Up button to

Receiving a Call


Press the Hang-


A notification is heard and the incoming call information appears on the display.

the call.

Up button to

end or decline

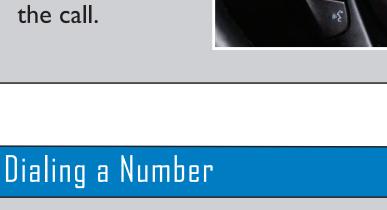

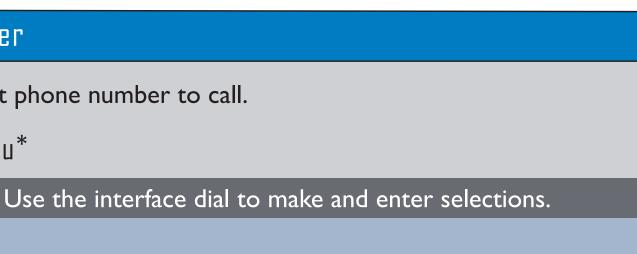

1234567

9Tal 1200

2. Press MENU. 3. Select Dial.

Using the Menu*

I. Press PHONE.

Using Voice Commands

*Manual operation is limited while the vehicle is moving. Voice commands are always available.

"3-1-0-5-5-5-1-2-3-4."

Using Speed Dial and Call History

3. The system begins to dial.

4. From the navigation screen or the

touchscreen, enter the phone number.

Select the green phone icon to call.

2. Say the phone number. For example,

Enter a 10-digit phone number to call.

1. Say "Dial by number." 1234567

Press and release the E Talk button before you say a command.

Use the interface dial to make and enter selections. I. Press PHONE.

2. From the Speed Dial tab, scroll

through the list to find the entry you

For Call History, move the interface

dial to the right and scroll through

want to call, and select it to call.

Store 20 speed dial entries for quick calling, or view the last 20 calls.

MARY

New Entry

+13104354475

Using the Phonebook

the list.

Using the Menu*

2. Press MENU.

3. Select Phonebook.

select it to call.

I. Say "Call by name."

Use the interface dial to make and enter selections. I. Press PHONE.

When your phone is paired, its entire phonebook is automatically imported to

the system. Phone synchronization must be on for this feature to work.

*Manual operation is limited while the vehicle is moving. Voice commands are always available. Using Voice Commands

4. Scroll through the list to find the name

and number you want to call, and

2. Say the phonebook name and phone

type. For example, "John Smith mobile."

Driver Distraction

Call history

Redial

Call history scroll

Connect to new phone

Function HFL System (Without Navigation)

Press and release the 🔟 Talk button before you say a command.

Restriction Level While Driving

Contact E

12 00

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the

vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

10-key dial Restricted Phonebook Restricted Speed dial Not restricted

Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted

Not restricted

Not restricted

Restricted

Voice command only. Limited to three screens