INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer

Starter system



Charging system



Low brake fluid



Low oil pressure



Supplemental Restraint System (SRS)



Electric Power System (EPS)



Forward Collision Warning (FCW)



Lane Departure Warning (LDW)



Anti-Lock Brake System (ABS)



Malfunction lamp (check engine light)



Tire Pressure Monitoring System (TPMS) (blinks and stays on)



Vehicle Stability Assist® (VSA)



Smart Entry System



Automatic light control



Brake system

Condition Indicators Action is needed by driver



Parking brake on: Release



Seat belt reminder: Fasten seat belt(s)



Door/Trunk open: Close door(s) / trunk



Low fuel:



Refill



FCW (blinks): **Brake**



Immobilizer (blinks): Use other vehicle key and see dealer



Low tire pressure: Add air



Maintenance MinderTM: Make dealer appointment



LDW (blinks): Stay in your lane

On/Off Indicators



PASSENGER AIRBAG **OFF** (next to display screen)



VSA OFF



CRUISE MAIN on





CRUISE CONTROL on



ECON Mode on



Fog lights on



Headlights on



Turn signals/hazards on



High beams on