

## BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is compatible with your phone.

**To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### Using HFL



**Pick-Up button:** Answer an incoming call or view a partial Phone menu.



**Hang-Up/Back button:** End a call, decline an incoming call, or cancel an operation.



**Talk button:** Make a call using a stored voice tag or phone number.



Use these buttons to navigate through the HFL menus.

**DISP button:**

Press and select Phone to go to the Phone screen.

**BACK button:**

Cancel an operation or return to the previous screen.



**Selector knob:**

 
Rotate to scroll through selections and press to make a selection.

### Pairing Your Phone

Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

Use the selector knob to make and enter selections.

1. Press and hold DISP to go to the Settings screen.
2. Select Phone Settings.
3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if pairing an additional phone).
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode and select OK.
6. HFL searches for your phone. Select your phone when it appears on the list.



*If your phone does not appear:* Select Phone Not Found and search for HandsFreeLink from your phone.

7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable Phone Synchronization. Select On to automatically import contacts and call history.



### Dialing a Number

Enter a 10-digit phone number to call.

Using the Touchscreen\*

1. Select Phone.
2. Select Dial.
3. Enter the phone number. Select the green Dial icon to call.



\*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the Talk button before you say a command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-1-2-3-4."
3. Say "Dial." The system begins to dial.



### Using Speed Dial or Call History

Store up to 20 speed dial entries, or view the last 20 calls for quick calling. The first six entries can be selected from the touchscreen.

1. Using the touchscreen, select Phone.
2. Select a speed dial entry to call, or select Call History and a number.

For the full list of entries, press DISP, select Phone, and select Speed Dial or Call History.



### Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. Phone synchronization must be on for this feature to work.

Using the Menu\*

Use the selector knob to make and enter selections.

1. Press DISP.
2. Select Phone.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want, and select it to call.



\*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the Talk button before you say a command.

1. Say "Call by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."



### Receiving a Call

 
A notification is heard and the incoming call information appears on the display.

Press the (Pick-Up) button to answer the call.



You can also select the icons on the touchscreen.

Press the (Hang-Up) button to end or decline the call.



### Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
<b>HFL System (Without Navigation)</b>	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
<b>HFL System (With Navigation)</b>	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted