INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the upper screen.

Changing the Display





Press the Display button to change the main displays.



Display Options


Audio

Shows current audio information.



Current Drive

Shows instant and average fuel, and range for the current drive.

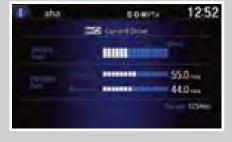


Clock (or wallpaper) Shows the clock or an imported image*.



History of Trip A

Shows average fuel and distance for the current and past three drives.

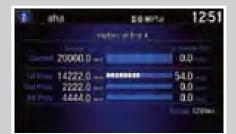

*See your Owner's Manual for instructions on how to upload a wallpaper image.