

## LANE DEPARTURE WARNING (LDW)


Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated.

### How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.



If you cross a lane line without using your turn signal, a message appears on the MID and a beep sounds. Steer the vehicle to return to your lane.

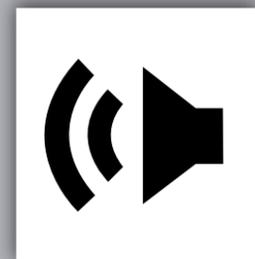

*LDW may not activate under certain conditions. See your Owner's Manual for more information.*

### Turning LDW On or Off

Press the LDW button to turn the system on or off. A green indicator light appears on the button when the system is on.

