

## SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

### Adjusting Vehicle Settings



Press **SETTINGS** to select the settings menu. Use the interface dial to make and enter selections.

Choose from the available options:



#### **Navi Settings**

Change various settings for navigation system routing.

#### **Camera Settings**

Change camera modes.

#### **Vehicle Settings\***

TPMS calibration, meter setup, door setup, and more.

*\*The shift lever must be in Park (P) to access this menu.*

#### **System Settings**

Adjust the display, system language, and more.

#### **Phone Settings**

Pair a phone, change call and text/e-mail options, and more.

#### **Info Settings**

Import wallpaper and select clock type.

#### **Audio Settings**



Change sound options and various settings for audio modes.

## DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote transmitter (1 or 2).

### Programming the DPMS

1. Turn on the vehicle. Make sure the shift lever is in Park (P).

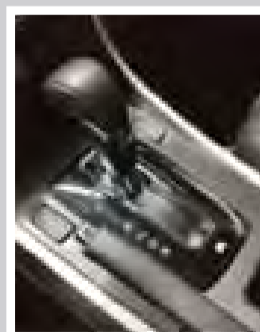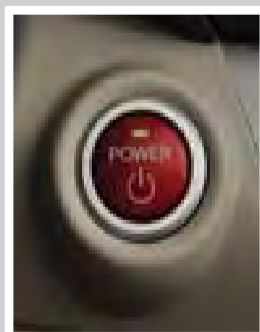

2. Adjust the seat to your preferred position.



3. Press SET. You will hear a beep.



4. Press the memory button corresponding to the remote (1 or 2) you are using within 5 seconds. You will hear two beeps.



**Note:** Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.