

## SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

### Adjusting Vehicle Settings



Press **SETTINGS** to select the settings menu. Use the interface dial to make and enter selections.

Choose from the available options:



#### **Navi Settings**

Change various settings for navigation system routing.

#### **Camera Settings**

Change camera modes.

#### **Vehicle Settings\***

TPMS calibration, meter setup, door setup, and more.

*\*The shift lever must be in Park (P) to access this menu.*

#### **System Settings**

Adjust the display, system language, and more.

#### **Phone Settings**

Pair a phone, change call and text/e-mail options, and more.

#### **Info Settings**

Import wallpaper and select clock type.

#### **Audio Settings**


Change sound options and various settings for audio modes.

## DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote transmitter (1 or 2).

### Programming the DPMS

1. Turn on the vehicle. Make sure the shift lever is in Park (P).

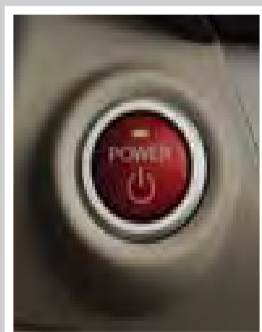

3. Press SET. You will hear a beep.



2. Adjust the seat to your preferred position.



4. Press the memory button corresponding to the remote (1 or 2) you are using within 5 seconds. You will hear two beeps.



**Note:** Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.