


FORWARD COLLISION WARNING (FCW)


Alerts you to the possibility of a front-end collision.

How It Works

At 10 mph or higher, if the camera mounted in the center of the upper windshield detects a vehicle in front of you and the system determines a collision is likely, the system provides you with the following visual and audible alerts.

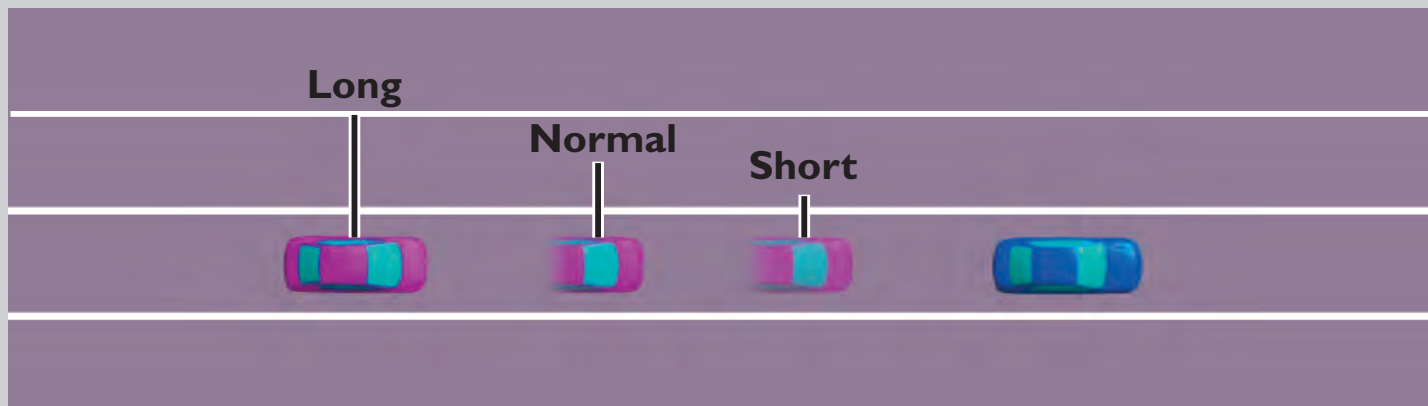

If you do not brake in time or take preventive action, the heads-up light near the windshield flashes twice, the FCW indicator flashes continuously, and a beep sounds continuously.

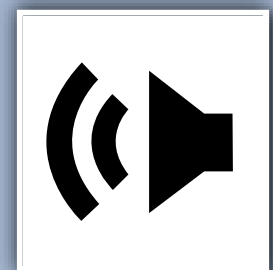

FCW may not activate under certain conditions. See your Owner's Manual for more information.

Changing Settings

Determine the warning timing, or turn the system off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **Forward Collision Warning Distance**.
4. Select **Long**, **Normal**, **Short**, or **Off**.
5. Press **BACK** to exit the menu.

