TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

What to Do

- I. Visually inspect the tires for damage.
- 2. Use a tire air pressure gauge to check which tire(s) have low pressure.
- 3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.
- 4. Start TPMS calibration.





TPMS Calibration

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system.

- I. Press and hold DISP to go to the Settings screen. Use the selector knob to make and enter selections.
- 2. Select Vehicle Settings.
- 3. Select TPMS Calibration.
- 4. Select Calibrate. The low tire pressure indicator blinks, and calibration begins.
- 5. Press BACK to exit the menu.

