

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Locks



Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

All doors are set to unlock when the driver's door is opened.

Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is on. See your Owner's Manual for complete setting options.

1. Press **SETTINGS**. Use the selector knob to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **Door Setup**.
4. Select **Auto Door Lock** or **Auto Door Unlock**.
5. Select from the options.
6. Press **BACK** to exit the menu.



Note: The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for unlocking the rear doors when a front door handle is pulled.