

ADAPTIVE CRUISE CONTROL (ACC)

Set a space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and increases or decreases your vehicle's speed to maintain a set following distance or speed.

Operating ACC



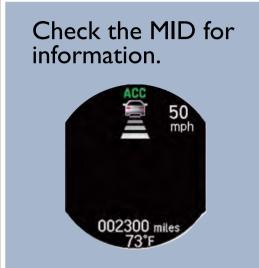

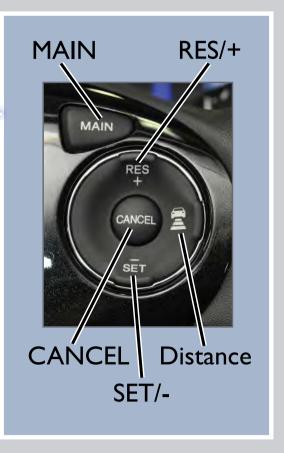

How to Use ACC

Turning ACC On

- I. Press MAIN.
- 2. ACC appears in the MID.

Using ACC

- I. Accelerate to the desired speed (above 25 mph).
- 2. Press SET/- and release the accelerator pedal. The set speed is fixed, and ACC begins.
- 3. To increase speed, press RES/+. To decrease speed, press SET/-.

Standard Cruise Control

- I. Press and hold the Distance button.
- 2. A beep sounds, and the selected mode appears in the MID.


Canceling ACC


There are three ways to cancel:

- Press MAIN.
- Press CANCEL.
- Tap the brake pedal.

Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

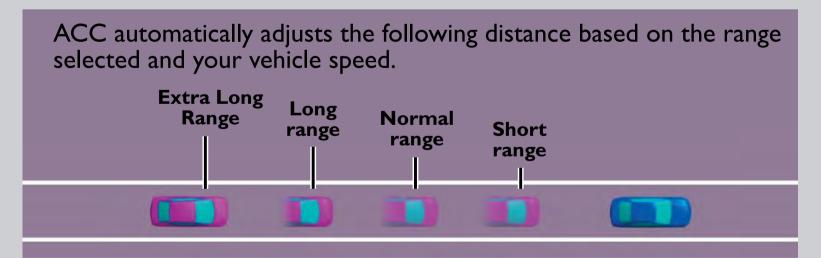

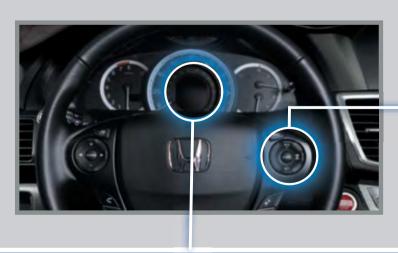


Press the
Distance button
to shuffle through
four ranges.



The selected range and set speed are shown on the MID.

Range	MID Screen
Extra Long	50 mph
Long	50 mph
Middle	50 mph
Short	50 mph

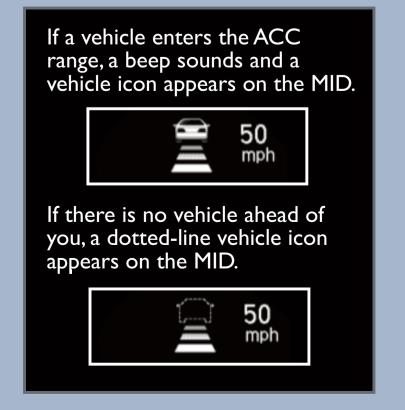

Note: The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.