

## BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is compatible with your phone. **To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### Using HFL



 
 
**Pick-Up button:** Answer an incoming call or go to a phone-specific voice portal screen.



**Hang-Up/Back button:** End a call, decline an incoming call, or cancel an operation.



**Talk button:** Make a call using a stored voice tag, phonebook name, or phone number.

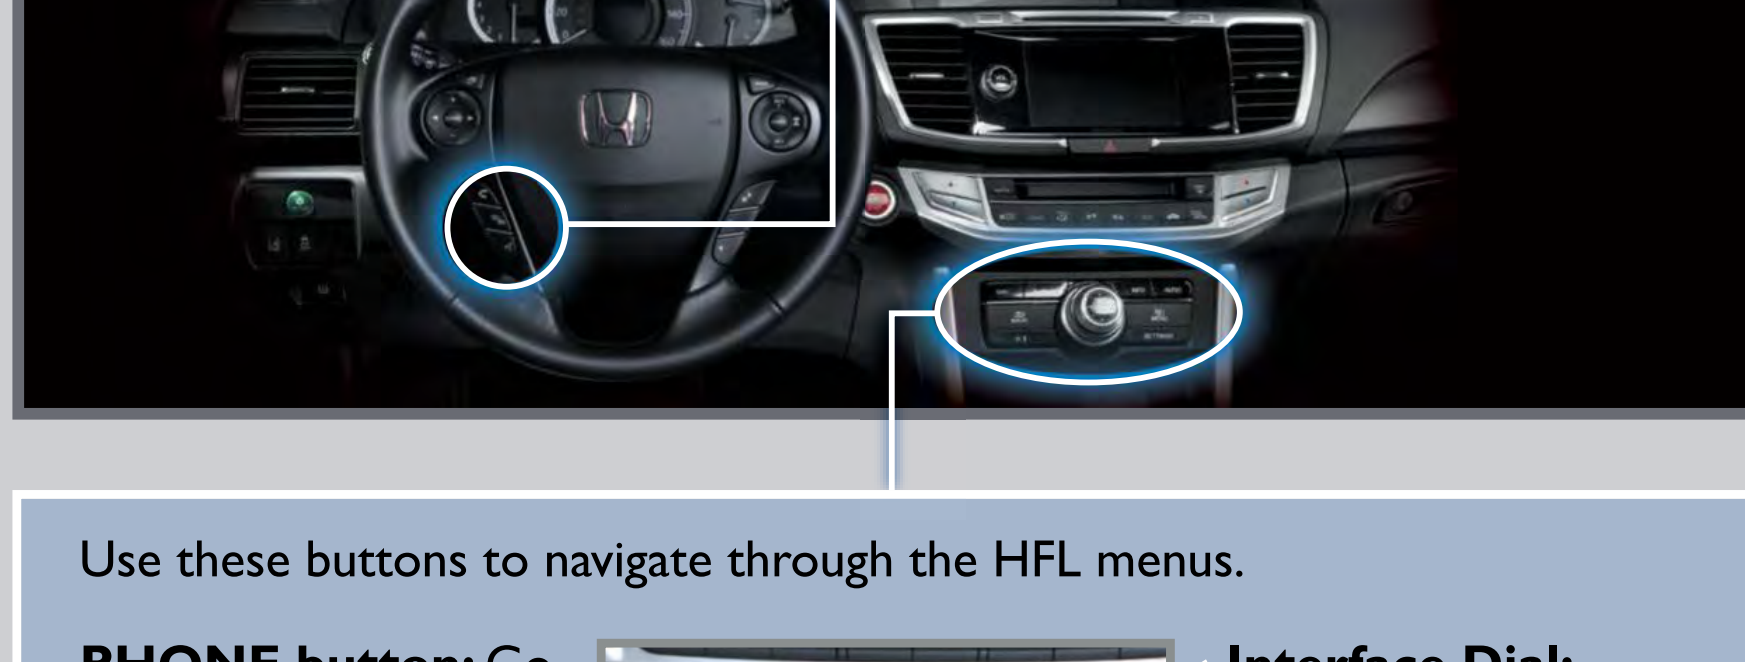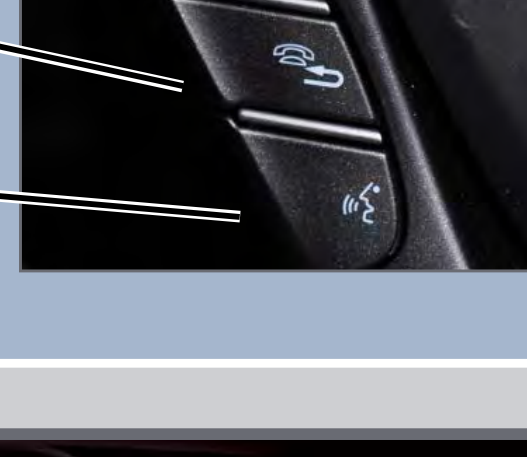

Use these buttons to navigate through the HFL menus.

**PHONE button:** Go to the phone screen.

**BACK button:** Cancel an operation or return to the previous screen.

**SETTINGS button:** Go to Phone Settings to pair a phone and set up text/e-mail options.



**Interface Dial:** Rotate to scroll through selections and press to make a selection.

**MENU button:** From the Phone screen, access Speed Dial, Redial, Call History, Phonebook, Dial, and Text/E-Mail options.

### Pairing Your Phone

 
 
 
Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Phone Settings.
3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if pairing an additional phone).
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode and select OK.
6. HFL searches for your phone. Select your phone when it appears on the list.

*If your phone does not appear:* Select Phone Not Found and search for HandsFreeLink from your phone.

7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable Phone Synchronization. Select On to automatically import contacts and call history.

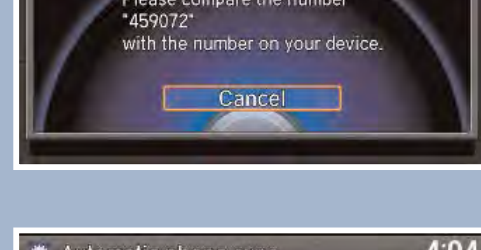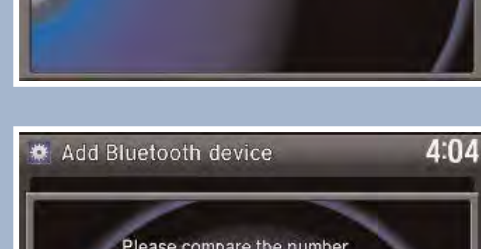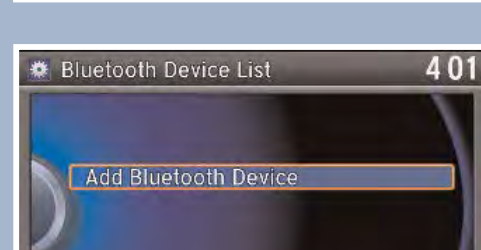

### Receiving a Call

A notification is heard and the incoming call information appears on the display.

Press the Pick-Up button to answer the call.



You can also select the icons on the touchscreen.



Press the Hang-Up button to end or decline the call.



### Dialing a Number

Enter a 10-digit phone number to call.

Using the Menu\*

Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Dial.
4. From the navigation screen or the touchscreen, enter the phone number. Select the green phone icon to call.

 


\*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the Talk button before you say a command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-5-1-2-3-4."
3. The system begins to dial.

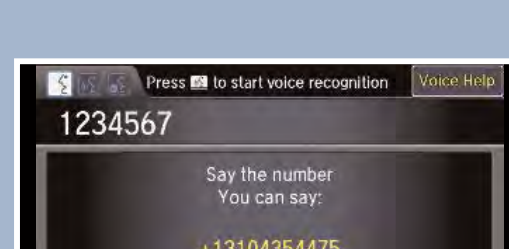

### Using Speed Dial and Call History

Store 20 speed dial entries for quick calling, or view the last 20 calls.

Use the interface dial to make and enter selections.

1. Press PHONE.
2. From the Speed Dial tab, scroll through the list to select the entry you want to call, and select it to call.

For Call History, move the interface dial to the right and scroll through the list.



 
### Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. Phone synchronization must be on for this feature to work.

Using the Menu\*

Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call, and select it to call.

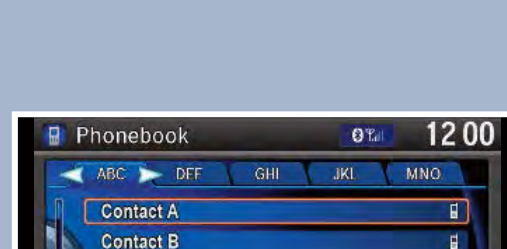

\*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the Talk button before you say a command.

1. Say "Call by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."



### Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
<b>HFL System (Without Navigation)</b>	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
<b>HFL System (With Navigation)</b>	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted