













INSTRUMENT PANEL INDICATORS




Malfunction Indicators




 

 
If an indicator remains on, there may be a problem; see your dealer

 Charging system	 Electric power steering (EPS)
 Low brake fluid, Brake system	 Malfunction indicator lamp (check engine light)
 Low oil pressure	 Vehicle Stability Assist® (VSA)
 Supplemental restraint system (SRS)	 Tire Pressure Monitoring System (TPMS) (<i>blinks and stays on</i>)
 Transmission (<i>blinking</i>)	 All-Wheel Drive (AWD) system*
 Anti-lock Brake System (ABS)	 Daytime running lights (DRL)






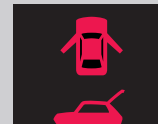



Condition Indicators

Action is needed by driver

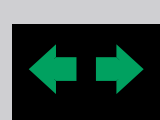 Parking brake on: Release	 Seat belt reminder: Fasten seat belt(s)
---	---

 Door/Tailgate open: Close door(s) / tailgate	 Low fuel: Refill
 Low tire pressure: Add air or calibrate system	 Maintenance Minder™: Make service appt
 All-Wheel Drive* (<i>blinks</i>): Pull over and idle	 Immobilizer (<i>blinks</i>): Use other vehicle key and see dealer

On/Off Indicators

 PASSENGER AIRBAG OFF (next to i-MID)	 Exterior lights on
 SIDE AIRBAG OFF	 Turn signals/hazards on
 VSA OFF	 Fog lights* on
 CRUISE MAIN on	 High beams on
 CRUISE CONTROL on	 ECON mode on

*if equipped