


SMS TEXT MESSAGING

Receive and send text messages from your paired and linked compatible phone. Visit handsfreelink.honda.com to see if this feature is compatible with your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

Receiving Text Messages

Press and release the  Talk button before you say a command.


1. A notification appears on the navigation screen.
2. Say “*Read*” to open the message. It is displayed, and the system reads it aloud.

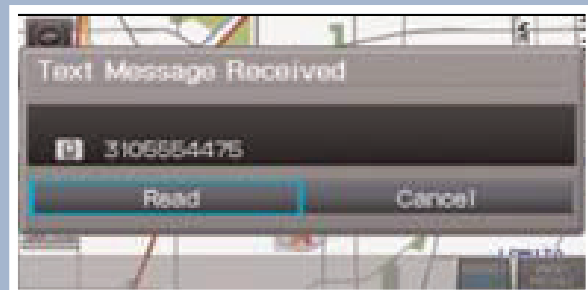

Replying to Text Messages

Press and release the  Talk button before you say a command.

1. With the message open, say “*Reply*.”
2. Say the number next to one of the six available reply messages.
3. Say “*Send*” to send the message.

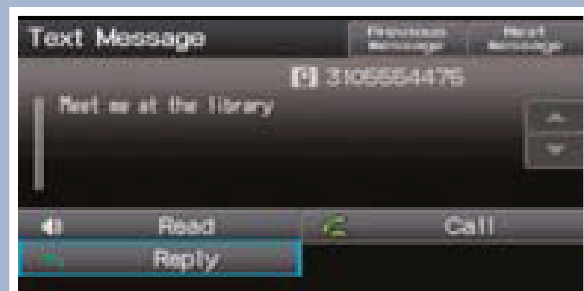

Calling the Sender

Press and release the  Talk button before you say a command.

1. With the message open, say “*Call*.”
2. HFL begins dialing the number.

