## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



## Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Charging system



Anti-Lock Brake System (ABS)



Low brake fluid, Brake system



Daytime Running Lights (DRL)



Low oil pressure



Malfunction indicator lamp (check engine light)



Supplemental Restraint System (SRS)



Tire Pressure Monitoring System (TPMS) (blinks and stays on)



Electric Power Steering (EPS)\*



Vehicle Stability Assist® (VSA)



Forward Collision Warning (FCW)



Smart Entry System\*



Lane Departure Warning (LDW)



Starter system\*

## Condition Indicators Action is needed by driver



Parking brake on:

Release



Low fuel: Refill



Door/Tailgate open:

Close door(s) / tailgate



Seat belt reminder:

Fasten seat belt(s)



Immobilizer (blinks):

Use other vehicle key and see dealer



Low tire pressure:





Maintenance Minder™:

Make dealer appointment



LDW (blinks):



Stay in your lane



FCW (blinks): **Brake** 

## On/Off Indicators



PASSENGER AIRBAG **OFF** (in center panel)



SIDE AIRBAG OFF







**VSA OFF** 





**CRUISE MAIN on** 



CRUISE CONTROL on



Fog lights on



Exterior lights on



Turn signals/hazards on



Fuel economy on\*



High beams on