

FUEL FILL DOOR



Easy-to-use locking fuel door keeps your fuel cap secure.

Opening the Fuel Fill Door

When you unlock the driver's door, the fuel door unlocks.



To open, push and release the fuel door in the area shown until it pops open.

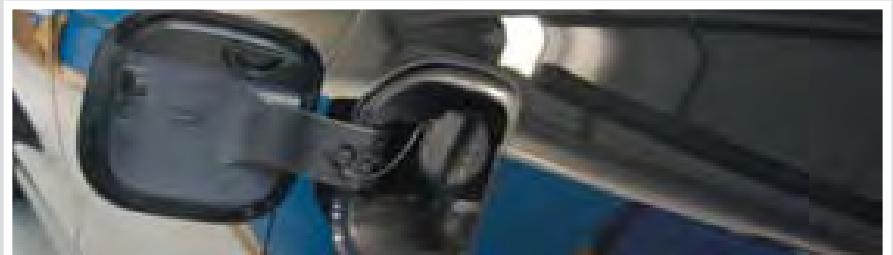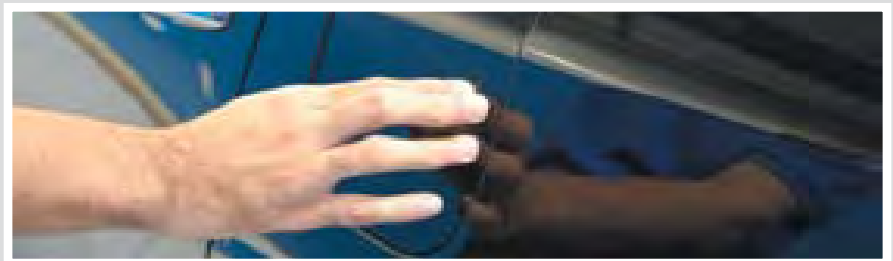

Closing the Fuel Fill Door

Push the fuel door until it is flush with the body.



When you lock the driver's door, the fuel door locks.

Note: If you lock the doors while the fuel door is open, you must unlock the doors to close the fuel door.

