
Provides various ways to monitor your fuel efficiency and driving style.

## Activating the ECON Mode

I. Press ECON.

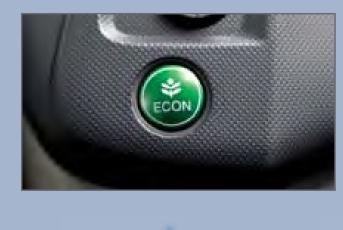


3. Check the MID.






comes on.

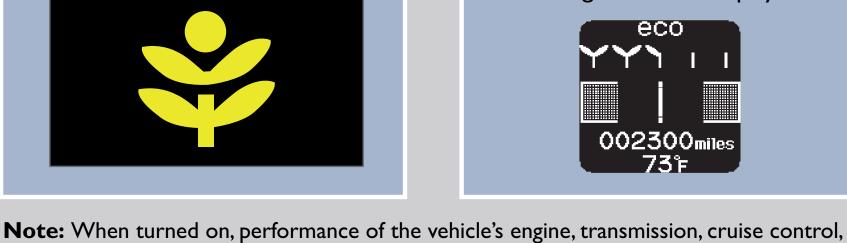


button and toggle to the Ecological Drive Display. eco 002300miles

and air conditioning system are adjusted to maximize fuel efficiency.

Driver Feedback

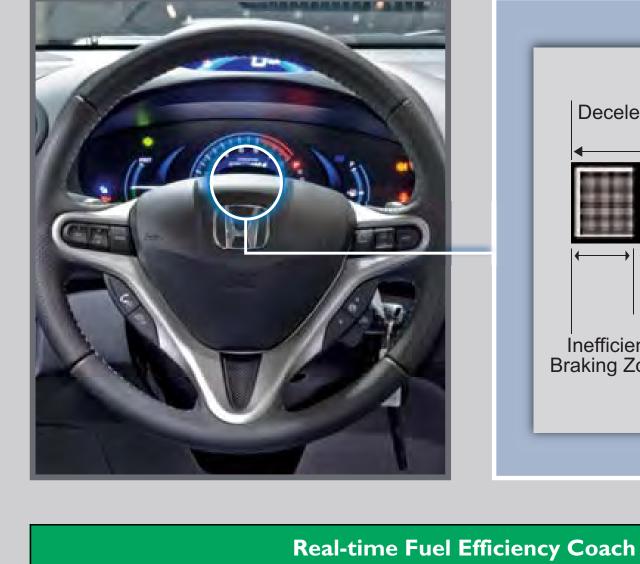

**Driving Style** 

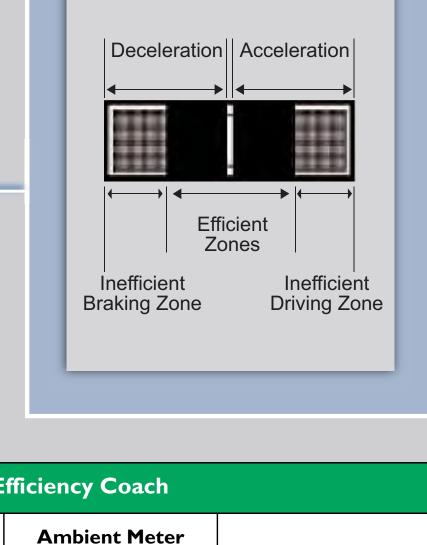

**Fuel Efficiency** 

**Background Color** 

Driving Style	(on the MID)	Background Color Changes	Fuel Efficiency
Smooth, steady acceleration maximizes fuel efficiency		<i>60</i>	High
Smooth, steady deceleration maximizes fuel efficiency			
Moderate acceleration		EΠ	
Moderate deceleration			
Rapid acceleration lowers fuel efficiency		E/I	
Rapid deceleration lowers fuel efficiency			Low
<ul> <li>Goals:</li> <li>Keep the Eco Drive bar near the center.</li> <li>Keep the Ambient Meter at GREEN.</li> <li>Develop a driving style that maximizes fuel efficiency.</li> </ul>			

**Eco Drive Bar** 

## ECO Assist Scoring

Monitors the fuel efficiency of your driving style in real time and converts results into leaves, which are displayed in a series of five "plant" icons on the MID.

Once you start your vehicle, make sure the MID shows the Ecological Drive


Display on the display to view your Eco Assist score in real time.




When you turn the ignition off, your drive cycle and lifetime score are

Each time you reach Recognition Recognition Recognition a new stage, a Stage Up Recognition icon

First Stage Up

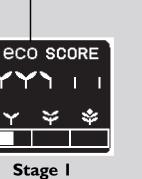

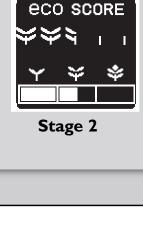

**eco score** 

\* \*

**Second Stage Up** 



eco score

**Drive Cycle** Score

> Lifetime Score

> > Last Stage Up

Auto Idle Stop Shuts the engine off at a stop in order to maximize fuel efficiency. Idle stop duration battery level, and outside temperature.

displayed on the MID.


**Eco Score** 

briefly appears on the MID. When you

reach the highest ranking, a Trophy

icon briefly appears.

## How It Works **DECELERATE**

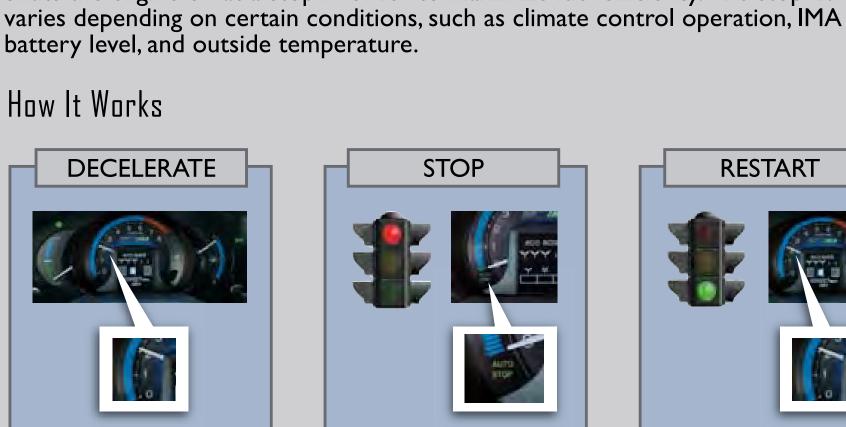

While at a stop,

pedal pressed, the

engine turns off.

with the brake



turns back on.

**RESTART** 

While driving, the

engine is on.

Note: Auto Idle Stop only functions if you come to a stop with the shift lever in the D or N position.





IMA Gauge

Shows the status of the Integrated Motor Assist (IMA) system. The gauge shows you when

the engine or charging the battery.

the IMA motor is assisting



