


TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works

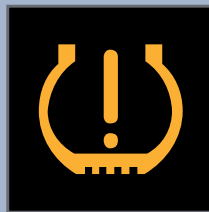

When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

TPMS

If the TPMS indicator appears, there may be a problem with the system. See your dealer.

What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

