## AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

## Door Lock Operation



#### **Default Lock Setting**

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.

#### **Default Unlock Setting**

Only the driver's door is preset to unlock when you shift into Park (P).

### Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver I or Driver 2) and the vehicle is in On mode. See your Owner's Manual for complete setting options.

- I. Press SETTINGS. Use the interface dial to make and enter selections.
- 2. Select Vehicle Settings.
- 3. Select Door Setup.
- 3. Select Auto Door Lock or Auto Door Unlock.
- 4. Select from the options.
- 5. Press BACK to exit the menu.



# SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

### Adjusting Vehicle Settings





interface dial to make and

enter selections.

Choose from the available options:



## **Navi Settings**

Change navigation, routing, and map settings.

# **Camera Settings**

Change LaneWatch settings and rear camera guidelines.

**Vehicle Settings** Change lighting and door setup,

#### and more.

language, and more.

**System Settings** 

Adjust the display, clock, system

# **Phone Settings**

Pair a phone, change call options, and more.

**Info Settings** Import wallpaper and select clock type.

**Audio Settings** Adjust the sound, and change

various settings for audio modes.