












## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



### Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

	Charging system		Daytime running lights (DRL)
	Low brake fluid, brake system		Anti-Lock Brake System (ABS)
	Low oil pressure		Malfunction lamp (check engine light)
	Supplemental Restraint System (SRS)		Vehicle Stability Assist® (VSA)
	Tire Pressure Monitoring System (TPMS)		Brake override system
	Starter system		









### Condition Indicators

Action is needed by driver

	Parking brake on: <b>Release</b>		Seat belt reminder: <b>Fasten seat belt(s)</b>
	Door/Tailgate open: <b>Close door(s)/tailgate</b>		Low fuel: <b>Refill</b>

	Maintenance Minder™: <b>Make dealer appointment</b>		Immobilizer ( <i>blinks</i> ): <b>Use other vehicle key and see your dealer</b>
	Low tire pressure: <b>Add air</b>		

### On/Off Indicators

	PASSENGER AIRBAG <b>OFF</b> (located on center panel)		Fuel economy <b>on</b>
	VSA <b>OFF</b>		Exterior lights <b>on</b>
	CRUISE MAIN <b>on</b>		Turn signals/hazards <b>on</b>
	CRUISE CONTROL <b>on</b>		High beams <b>on</b>