AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Lock Operation



Default Lock Setting

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).

Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver I or Driver 2) and the ignition switch is turned to ON (II). See your Owner's Manual for complete setting options.

- I. Press SETTINGS. Use the selector knob to make and enter selections.
- 2. Select Vehicle Settings.
- 3. Select Door Setup.
- 3. Select Auto Door Lock or Auto Door Unlock.
- 4. Select from the options.
- 5. Press BACK to exit the menu.



SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

Adjusting Vehicle Settings





Press SETTINGS to enter the Settings Menu. Use the selector knob to make and enter selections.

Choose from the available options:



Sound

Adjust bass, treble, and more.

Audio Settings

Change various settings for audio

modes.

Info Settings

Import wallpaper and select clock type.

Phone Settings

and more.

Pair a phone, change call options,

Clock Adjustment

Adjust the system clock.

Camera Settings

Change rear camera guidelines.

Vehicle Settings

Change lighting and door setup, and more.

language, and more.

System Settings Adjust the display, clock, system